

**DMX channel function and values:**

<b><u>Channel 1 - PAN movement 8bit:</u></b>		
<b><u>Channel 2 – Pan fine 16bit:</u></b>		
<b><u>Channel 3 - TILT movement 8bit:</u></b>		
<b><u>Channel 4 – Tilt fine 16bit:</u></b>		
<b><u>Channel 5 - Color Wheel :</u></b>		
0-13	Open / White	
14-27	Red	
28-41	Blue	
42-55	Green	
56-69	Dark Yellow	
70-83	Magenta	
84-97	Orange	
98-111	UV filter	
112-127	Pink	
128-187	Forwards rainbow effect from fast to slow	
188-193	No rotation	
194-255	Backwards rainbow effect from slow to fast	
<b><u>Channel 6 - Rotating gobos, cont. rotation :</u></b>		
0-9	Open	
10-19	Rot. Gobo 1	
20-29	Rot. Gobo 2	
30-39	Rot. Gobo 3	
40-49	Rot. Gobo 4	
50-59	Rot. Gobo 5	
60-69	Rot. Gobo 6	
70-89	Gobo 1 shake slow to fast	
90-109	Gobo 2 shake slow to fast	
110-129	Gobo 3 shake slow to fast	
130-149	Gobo 4 shake slow to fast	
150-169	Gobo 5 shake slow to fast	
170-189	Gobo 6 shake slow to fast	
190-255	Rot. Gobo Wheel CW Rotation slow to fast	

<b><u>Channel 7 - Rotating Gobo Index, Rotating Gobo Rotation :</u></b>		
0-127	Gobo Indexing	
128-187	CW Gobo Rotation from fast to slow	
188-193	No rotation	
194-255	CCW Gobo Rotation from slow to fast	
<b><u>Channel 8- Fixed Gobos :</u></b>		
0-13	Open	
14-27	Gobo 1	
28-41	Gobo 2	
42-55	Gobo 3	
56-69	Gobo 4	
70-83	Gobo 5	
84-97	Gobo 6	
98-111	Gobo 7	
112-127	Gobo 1 shake slow to fast	
128-143	Gobo 2 shake slow to fast	
144-159	Gobo 3 shake slow to fast	
160-175	Gobo 4 shake slow to fast	
176-191	Gobo 5 shake slow to fast	
192-207	Gobo 6 shake slow to fast	
208-223	Gobo 7 shake slow to fast	
224-255	Gobo Wheel rotation from slow to fast	
<b><u>Channel 9- 3 facet rotating prism, Prism / Gobo macros:</u></b>		
0-3	Open	
4-63	Forwards rotation from fast to slow	
64-67	No rotation	
68-127	Backwards rotation from slow to fast	
128-135	Macro 1	
136-143	Macro 2	
144-151	Macro 3	
152-159	Macro 4	
160-167	Macro 5	
168-175	Macro 6	
176-183	Macro 7	
184-191	Macro 8	
192-199	Macro 9	
200-207	Macro 10	
208-215	Macro 11	

216-223	Macro 12	
224-231	Macro 13	
232-239	Macro 14	
240-247	Macro 15	
248-255	Macro 16	
<b><u>Channel 10 – Focus :</u></b>		
0-255	Continuous adjustment from far to near	
<b><u>Channel 11 - Shutter, strobe:</u></b>		
0-31	Shutter closed	
32-63	No function (shutter open)	
64-95	Strobe effect slow to fast	
96-127	No function (shutter open)	
128-159	Pulse-effect in sequences	
160-191	No function (shutter open)	
192-223	Random strobe effect slow to fast	
224-255	No function (shutter open)	
<b><u>Channel 12 - Dimmer (intensity):</u></b>		
0-255	Intensity 0 to 100%	
<b><u>Channel 13 - Speed pan/tilt movement:</u></b>		
0-4	Max speed	
5-225	Max to min speed	
226-235	Blackout by movement	
236-245	Blackout by all wheel changing	
246-255	No function	
<b><u>Channel 14– Lamp on/off, reset, internal programs:</u></b>		
0-19	Color Change Normal (Solid Colors Only)	
20-39	Enable Split Colors	
40-59	Lamp on	
60-79	Lamp switch off	
80-84	All motor reset	
85-87	Scan motor reset	
88-90	Colors motor reset	
91-93	Gobo motor reset	
94-96	Shutter & Dimmer motor reset	
97-99	Other motor reset	

---

100-119	Internal program 1	
120-139	Internal program 2	
140-159	Internal program 3	
160-179	Internal program 4	
180-199	Internal program 5	
200-219	Internal program 6	
220-239	Internal program 7	
240-255	Auto program by music	