



FT-50 Fire Training Fog Machine User Manual



ENGLISH



User Manual - English

Safety Information



Please read the following safety information carefully before operating the machine. This information includes important safeguards about installation, usage, and maintenance. Pay attention to all warning labels and instructions in this manual and printed on the machine.

If you have questions about how to operate the machine safely, please contact your local Antari dealer for help.

- Keep this device dry.
- Always connect to a grounded circuit to avoid risk of electrocution.
- Before connecting machine to power, always check voltage indicate on machine match to your local AC voltage. Do not use the machine if AC power voltage does not match.
- Disconnect the machine from AC power before servicing and when not in use.
- This product is for indoor use only! Do not expose to rain or moisture. If fluid is spilled, disconnect AC power and clean with a damp cloth. If fluid is spilled onto electronic parts, immediately unplug the machine and contact your local Antari dealer for advice.
- No user serviceable and modifiable parts inside. Never try to repair this product, an unauthorized technician may cause damage or malfunction to the machine.
- For adult use only. Never leave the machine running unattended.
- Installed the machine in a well-ventilated area. Provide at least 50 cm space around the machine.
- Never add flammable liquid of any kind to the machine.
- Make sure there are no flammable materials close to the machine while operating.
- Only use Antari aerosols. Other aerosols may lead to heater clog and malfunction.
- Remove aerosols after use.
- If the machine fails to work, unplug the machine and stop operation immediately.

Contact your local Antari dealer for advise.

- Before transporting the machine, make sure the aerosols is removed
 - Fog fluid may present health risks if swallowed. Do not drink fog fluid. Store it securely.
- In case of eye contact or if fluid is swallowed, immediately look for medical advice.

Unpacking and Inspection

Immediately upon receiving the machine, carefully unpack the carton, check the content to ensure that all parts are present and have been received in good condition. If any parts appear damaged or mishandled from shipping, notify the shipper immediately and retrain the packing material for inspection.

What is included:

- 1 x FT-50 Fog Machine
- 1 x Power Cord
- 1 x User Manual

Product Dimensions




Product Overview



Operation

Step 1: Place the machine on a flat surface and in a suitable large area with at least 50 cm open space around the machine.

Step 2: Check and cleared any foreign object in the threaded aerosol insert. Align aerosol valve with threaded insert and carefully turn clockwise to fix into position. Aerosol should be screwed in tightly to create an effective seal

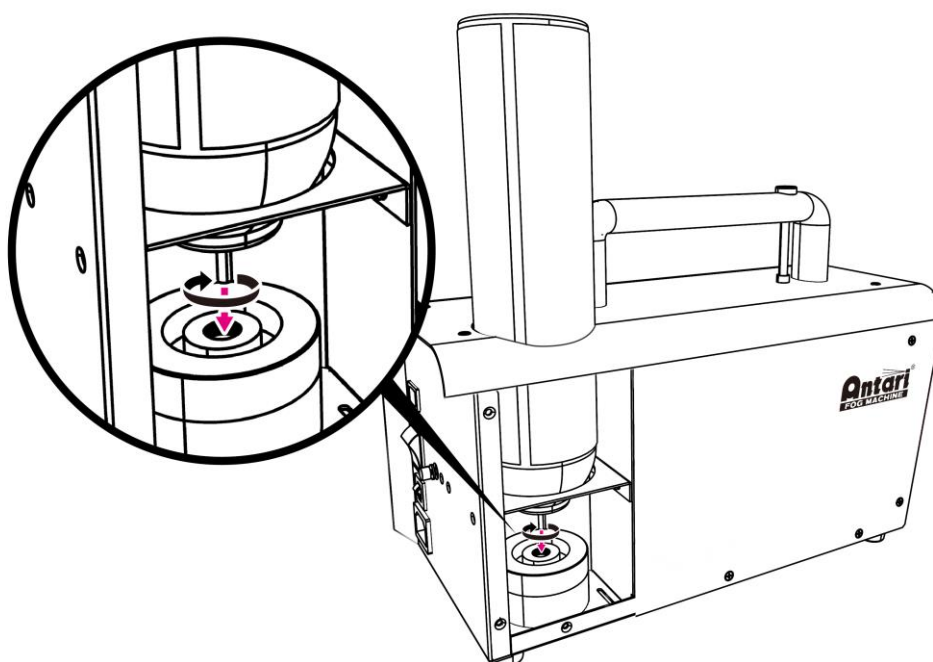

=

Step 3: Connect the machine to suitable rated power supply. To determine the power requirement for the machine refer to the label on the back of the machine.



Always connect the machine to a protected circuit and ensure it is properly grounded to avoid risk of electrocution.

Step 4: Turn on the machine and allow it to heat up. Heat up takes approximately 7.5 minutes. Once the machine has reached operating temperature, the LED indicator located in back panel will turn solid green. Now the machine is ready for operation.

Step 5: To start making fog, press and hold the push button on handle bar, release to stop.

Step 6: To adjust output volume, rotate the knob located in back panel. Turn counter-clockwise to increase, clockwise to decrease.

Step 7: To turn off the machine, flip the power switch to OFF position. Remove aerosol and power cord.

Off Power Operation

FT-50 can be operating off mains power once it has reached working temperature. The amount of smoke can be produced depends on its temperature cycle when it is disconnected. With a complete heating cycle the machine can still generate smoke up to 45 minutes after disconnection.

The quality of fog must be carefully observed while operating off mains power. When smoke has become thin and blue indicates the temperature is getting low. Reconnect machine to mains power for heating process, once it reached working temperature it can be operate off power again.

Aerosols



Only use Antari FLP-700 aerosol for the FT-50 Fire Training Fog Machine.

The machine is tested and calibrated with this aerosol to get the best output performance. Warranty will be void if any other type of aerosol is used, improper use of aerosol may lead to machine failure and malfunction.

Service and Maintenance

- Do not allow the machine to become contaminated.
- Remove dust from air vents with air compressor, vacuum or a soft brush.
- Only use a damp cloth to clean the casing.
- Before storing run distilled water through the system to help avoid condensing the pump or heater.
- It is recommended to run the machine on a monthly basis in order to achieve best performance and output condition.
- Excessive dust, liquid and dirt built up will degrade performance and cause overheating.

Breaker Reset



Disconnect AC power before resetting the breaker. Only replace fuse with same type and rating.

Step 1: Disconnect AC power.

Step 2: Flip breaker to ON position.

Step 3: Turn on machine for testing.

Breaker

120V = 15A 250V

230V = 8A 250V

Technical Specifications

Input voltage	US 120V EU 230V UK 240V JP 100V
Breaker	120V = 15A 250V 230V = 8A 250V
Heater	1450W
Warm-up time	7.5 min. (approx.)
Fluid consumption	110 ml/min
Compatible fluid	Antari FLP aerosol
Power connection	IEC
Dimension	L 346 x W 152 x H 251 mm
Dry weight	9.8 kg



For current product information visit Antari at: www.antari.com
For information requests please contact us at: sales@antari.com



C08FT0500

www.antari.com