Design Par 575H

DMX Channel Functions and their values (8 DMX channels):

Channel 1 - Pan movement 8bit:	
Channel 2 – I	Pan fine (16bit only):
Channel 3 –	Tilt movement 8bit:
<u>Channel 4 – Tilt fine (16bit only):</u>	
Channel 5 – S	Speed pan/tilt movement:
0~255	Max to min speed
Channel 6 – Dimmer intensity:	
0~255	Intensity 0% ~ 100%
Channel 7 – S	Strobe:
0~4	Dimmer
5~255	Strobe effect from slow to fast
<u>Channel 8 – Lamp on/off, reset, internal programs:</u>	
0~19	Normal control
20~39	No function
40~59	Lamp on
60~79	Lamp switch off
80~84	All motor reset
85~87	Scan motor reset
88~99	No function
100~119	Internal program 1
120~139	Internal program 2
140~159	Internal program 3
160~179	Internal program 4
180~199	Internal program 5
200~219	Internal program 6
220~239	Internal program 7
240~255	Auto program by music