

# AR-32 ARCHITECTURAL DMX RECORDER



## USER MANUAL

Manual Revision:  
May 2008

Software Revision:  
Version 2.09

# Table of Contents

1.	Elation Support .....	4
1.1	Thank You for Purchasing the AR-32 .....	4
1.2	Customer Service .....	4
1.3	2-Year Limited Warranty .....	5
2.	General Information.....	6
2.1	Safety .....	6
2.2	Compliance .....	7
2.3	Abbreviations.....	7
3.	Introduction.....	8
3.1	AR-32 Description.....	8
3.2	Manual Conventions .....	9
4.	Specifications.....	10
4.1	AR-32 Components .....	10
4.2	AR-32 Features .....	11
5.	Installation .....	12
5.1	Unpacking Contents.....	12
5.2	Cabling Requirements.....	12
5.3	Installation Procedures.....	14
5.3.1	Wall-mounting the AR-32C.....	14
5.3.2	Desktop mounting the AR-32C .....	14
5.4	Setup Procedures.....	15
5.4.1	Software Installation .....	15
5.4.2	System Connection .....	15
5.4.3	Software Launch .....	15
6.	Operation .....	16
6.1	AR-32C Controls & Connections .....	16
6.2	AR-32P Controls & Connections .....	17
6.3	AR-32 IR Remote Controls .....	18
6.4	DMX Channels .....	19
6.5	Software Overview .....	20
6.5.1	Main Screen .....	20
6.5.2	Show Edit Screen.....	27
6.5.3	Events Edit Screen .....	32
6.6	Programming Tips .....	36
7.	Service .....	37
7.1	Maintenance .....	37
7.1.1	General Inspection .....	37
7.1.2	Basic Cleaning .....	37
7.2	Troubleshooting .....	38

# 1. Elation Support

## 1.1 Thank You for Purchasing the AR-32

Thank you for your purchasing the Elation Professional AR-32 Architectural Recorder System. Please read the instructions in this manual carefully and thoroughly before attempting to operate this unit. These instructions contain important information regarding safety during use and maintenance. Please fill out and return the enclosed warranty card to validate your purchase.

1

## 1.2 Customer Service

Elation provides a toll free customer support line, to provide set up help and to answer any question should you encounter problems during you set up or initial operation. You may also visit us on the web at [www.elationlighting.com](http://www.elationlighting.com) for any comments or suggestions.

All returned service items whether under warranty or not, must be freight pre-paid and accompany a Return Authorization (RA) number. The RA number must be clearly written on the outside of the return package. Items returned without a RA number clearly marked on the outside of the package will be refused and returned at customer's expense. You may obtain a RA number by contacting customer service.

A brief description of the problem as well as the RA number must be written down on a piece of paper and included in the shipping container. If the unit is under warranty, you must also provide a copy of your proof of purchase invoice.

Customer Service hours are Monday through Friday 8:00 a.m. - 5:00 p.m. Pacific Standard Time.

Toll Free: (866) 245-6726

Phone: (323) 582-3322

Fax: (323) 832-9142

Information: [info@elationlighting.com](mailto:info@elationlighting.com)

Sales: [sales@elationlighting.com](mailto:sales@elationlighting.com)

Support: [support@elationlighting.com](mailto:support@elationlighting.com)

Forum: <http://forums.elationlighting.com>

## **1.3 2-Year Limited Warranty**

Elation hereby warrants, to the original purchaser, Elation Professional products to be free of manufacturing defects in material and workmanship for a period of 2 Years (730 days) on all internal parts, components, and labor. This warranty shall be valid only if the product is purchased within the United States of America, including possessions and territories. It is the owner's responsibility to establish the date and place of purchase by acceptable evidence, at the time service is sought.

For warranty service, send the product only to the Elation factory. All shipping charges must be pre-paid. If the requested repairs or service (including parts replacement) are within the terms of this warranty, Elation will pay return shipping charges only to a designated point within the United States except Hawaii or Alaska. If the entire instrument is sent, it must be shipped in its original package. No accessories should be shipped with the product. If any accessories are shipped with the product, Elation shall have no liability whatsoever for loss of or damage to any such accessories, nor for the safe return thereof.

This warranty is void if:

- The serial number has been altered or removed
- The product is modified in any manner which Elation concludes, after inspection, affects the reliability of the product
- The product has been repaired or serviced by anyone other than the Elation factory unless prior written authorization was issued to purchaser by Elation
- The product is damaged because it was not properly maintained as set forth in the instruction manual

This is not a service contract, and this warranty does not include maintenance, cleaning or periodic check-up. During the period specified above, Elation will replace defective parts at its expense, and will absorb all expenses for warranty service and repair labor by reason of defects in material or workmanship. The sole responsibility of Elation under this warranty shall be limited to the repair of the product, or replacement thereof, including parts, at the sole discretion of Elation. All products covered by this warranty were manufactured after January 1, 1990, and bear identifying marks to that effect.

Elation reserves the right to make changes in design and/or improvements upon its products without any obligation to include these changes in any products theretofore manufactured.

No warranty, whether expressed or implied, is given or made with respect to any accessory supplied with products described above. Except to the extent prohibited by applicable law, all implied warranties made by Elation in connection with this product, including warranties of merchantability or fitness, are limited in duration to the warranty period set forth above. And no warranties, whether expressed or implied, including warranties of merchantability or fitness, shall apply to this product after said period has expired. The consumer's and/or Dealer's sole remedy shall be such repair or replacement as is expressly provided above; and under no circumstances shall Elation be liable for any loss or damage, direct or consequential, arising out of the use of, or inability to use, this product.

This warranty is the only written warranty applicable to Elation Products and supersedes all prior warranties and written descriptions of warranty terms and conditions heretofore published.

## 2. General Information

### 2.1 Safety

The following symbols are used throughout this manual:



Indicates potential injury or death to persons.



Indicates potential damage to equipment.



Indicates items may be recycled.

The following safety information relates to the AR-32 Architectural Recorder System. Please read each item carefully to ensure you fully understand them.



To prevent the risk of electrical shock, do not open this unit. There are no user serviceable parts inside this unit. Do not attempt any repairs yourself. Doing so will void your manufacturer's warranty. Should your unit require service, please contact your nearest Elation dealer or Elation Customer Service.



To prevent or reduce the risk of electrical shock or fire, do not expose this unit to rain or moisture. Do not remove the plug ground pin or connect to an ungrounded circuit.



This unit is not designed for use by persons under the age of 12. Use only under adult supervision.



Turn off the power if not using this unit for a long time.

## **2.2 Compliance**



The CE marking (an acronym for the French "Conformite Europeenne") certifies that a product has met EU health, safety, and environmental requirements, which ensure consumer safety. A manufacturer that has gone through the conformity assessment process may affix the CE marking to the product.

The AR-32 system has passed internal testing based on the EN55015:2001 standard, and is 100% CE compliant. We certify that the product conforms to the protection requirements of council directives 73/23/EEC (LVD) and 89/336/EEC (EMC).

## **2.3 Abbreviations**

**CD** – Compact Disc

**DMX** – Digital Multiplex

**Gb** – Gigabyte

**Ghz** – Gigahertz

**IR** – Infra Red

**LAN** – Local Area Network

**Mb** – Megabyte

**PC** – Personal Computer

**RA** – Return Authorization

**RAM** – Random Access Memory

**RGB** – Red, Green, Blue


**USB** – Universal Serial Bus

**XLR** – 3-pin Cannon X connector, with Latch and Rubber guard

## 3. Introduction

### 3.1 AR-32 Description

The AR-32 Architectural Recorder System (Figure 1) is a DMX recording and playback system. This system is capable of controlling any type of DMX device by recording a DMX control signal and saving it to a scene file in memory. Scene files may be played back at any time using the manual controls, using remote DMX triggering, or using timed triggering via the internal software.

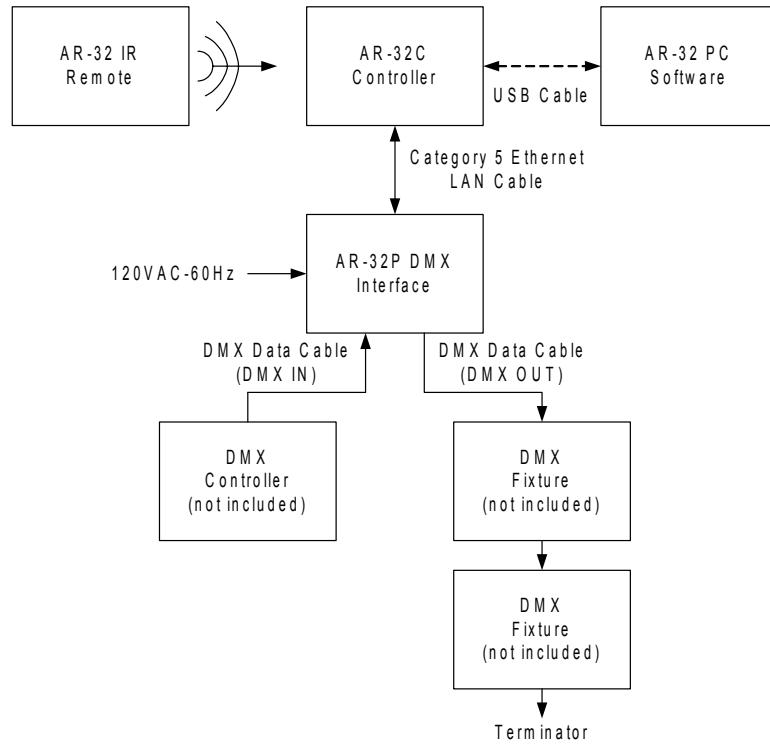

**Figure 1**

The AR-32C Controller may be installed in any standard 1-gang wall box or mounted for desktop use with the included stand. The controller may be operated remotely using the included AR-32 IR remote control. The AR-32C connects to the AR-32P DMX Interface using industry standard Category 5 Ethernet LAN cable.

AR-32 System Control Software is used to record and manage scene files. A USB port on the AR-32C provides for PC connection using the included USB cable.

The AR-32P DMX Interface provides DMX IN and DMX OUT connections for standard 3-pin DMX data cable. The DMX IN provides connection to a DMX controller for DMX recording and DMX triggering operations. The DMX OUT provides connection to DMX fixtures for playback operations.

## 3.2 Manual Conventions

The following terms and conventions are used throughout this manual:

- Buttons and switches are presented using their exact spelling and capitalization and surrounded by brackets (i.e. press the [PAGE 1] button).
- **Activate** is used with switches/buttons that toggle between two values and means place the control in its active state.
- **Deactivate** is used with switches/buttons that toggle between two values and means place the control in its non-active state.
- **Intercancel** means that pushing one button simultaneously selects that button and automatically deselects the previously selected button. One button is always active. For example, the [SHOW] buttons intercancel.
- **Select** describes pointing to and clicking a button or checkbox (on a software screen) such that it is activated. This allows a single instruction to describe this action without knowing the control's previous state. For example, if the control is not selected, clicking the control once selects it. If it is already selected, no action is required.
- **Highlight** describes the outlining of selected text or files with a colored border to make it stand out. For example, **this text is highlighted**. Text may be highlighted by clicking and dragging the cursor across the portion desired.

This manual is Copyright © 2008 Elation Professional. All rights reserved. No part of the manual included with this product can be reproduced or transmitted in any form, by any means, for any purpose without prior written authorized permission.

Information contained in this manual is subject to change at any time and without notice. Please contact Elation Customer Service or visit [www.elationlighting.com](http://www.elationlighting.com) for the latest manual revisions.

## 4. Specifications

### 4.1 AR-32 Components

The AR-32 Architectural Recorder System (Figure 2) is composed of the following components:

- AR-32C Controller
- AR-32P DMX Interface
- Ethernet LAN Cable (Category 5 with RJ-45 connectors)
- AR-32 IR Remote
- AR-32 System Control Software and USB Cable



Figure 2

The AR-32 comes pre-loaded with 32 shows designed for use with RGB type LED fixtures (strips, cubes, panels, etc.). Shows 1-16 include static color scenes and Shows 17-32 include various rainbow chases. All factory scenes are written for 512 DMX channels.

## 4.2 AR-32 Features

The AR-32 Architectural Recorder System is a lighting control system that records DMX signals from a separate controller and saves these recordings to scene (.scn) files for future playback. Multiple scenes may be loaded to each controller show location. Shows may be played back manually using the AR-32 Controller, remotely using the IR remote or a DMX signal, or internally triggered using time and date.

The AR-32 software is also capable of converting Adobe Flash animations into RGB pixel data for playback on LED fixtures. Up to 170 pixels in any orientation may be converted from Flash (.swf) file format to DMX scene (.scn) file format.

The AR-32 Architectural Recorder System has the following features:

- 512 DMX Channel recording
- Flash (.swf) file playback and conversion
- Up to 32 shows (4 pages, 8 shows per page)
- Up to 16 scenes per show, with 248 scene file capacity
- 128Mb memory maximum
- Memory retained upon power failure
- Real time individual triggering of desired scenes
- Playback via DMX Control Mode
- Playback via Timed Trigger Mode
- Playback via Manual Mode
- AR-32 System Control Software for controller configuration
- AR-32C USB communication port for PC link
- Infrared remote control
- Wall-mount or free standing desktop controller installation
  
- Power input: 120VAC - 60Hz
- Fuse: F0.5A 250V 5x20mm
- Dimensions: 57x74x43mm
- Weight: approx 0.2kg

The AR-32 system software has the following minimum hardware requirements:

- CPU: Pentium 4 - 2 Ghz
- RAM: 512 Mb
- Hard Disk: 20 Gb free space
- Video: 128 Mb RAM

## 5. Installation

### 5.1 Unpacking Contents

When first opening your AR-32 Architectural Recorder System, please ensure that all system components are present. The system ships with the following components:

- AR-32C Controller & Stand
- AR-32P DMX Interface
- 50' Category 5 Ethernet LAN Cable
- AR-32 IR Remote
- AR-32 System Control Software CD
- AR-32 User Manual

Upon unpacking, carefully inspect your unit for any damage that may have occurred during shipping. If damage has occurred, do not plug the unit in. Contact your Elation dealer as soon as possible.



Do not discard packing carton in the trash. Please recycle whenever possible.

### 5.2 Cabling Requirements

The AR-32P provides power to the system and plugs into any standard 120VAC – 60Hz grounded receptacle. The AR-32C receives power from the AR-32P via the Category 5 Ethernet LAN cable (Figure 3) that connects the two components.

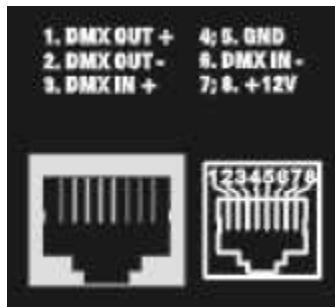


Figure 3



The AR-32 does not use standard Ethernet protocol, and cannot be used with Ethernet routers or switches.

---

The AR-32P also provides DMX IN and DMX OUT 3-pin XLR connectors (Figure 4) for DMX recording, control, and playback operations. Use only cable rated for DMX512 data transmissions.



Figure 4

Data cabling should meet the following USITT DMX512 specification requirements:

- Low capacitance
- Two twisted pairs
- Foil or braid shielded
- Suitable for use with EIA485 (RS485) operation at 250k baud
- Characteristic impedance 85-150 ohms, nominally 120 ohms
- 24 AWG min. gauge for runs up to 1000 feet (300m)
- 22 AWG min. gauge for runs up to 1640 feet (500m)



Microphone cables and other general purpose, two-conductor audio or signal cables are not suitable for use with DMX512.

## 5.3 Installation Procedures

The AR-32 Architectural Recorder System can be installed in one of two ways, wall-mount or desktop.

### 5.3.1 Wall-mounting the AR-32C

1. Remove the back cover of the AR-32C by removing the retaining screw at the base of the controller and snapping the cover off.
2. Pull the Category 5 Ethernet LAN cable RJ-45 connector through the center hole on the back cover (Figure 5).
3. Using the pre-drilled holes, connect the back cover to a 1-gang wall box.
4. Connect the RJ-45 connector to the front portion of the controller.
5. Snap the front of the controller onto the back cover and replace the retaining screw.



Figure 5

### 5.3.2 Desktop mounting the AR-32C

1. Remove the back cover of the AR-32C by removing the retaining screw at the base of the controller and snapping the cover off.
2. Using the four pre-drilled holes, connect the back cover to the included desktop stand (Figure 6).
3. Pull the Category 5 Ethernet LAN cable RJ-45 connector through the center hole on the back cover and stand, and connect the RJ-45 connector to the front portion of the controller.
4. Snap the front of the controller onto the back cover and replace the retaining screw.

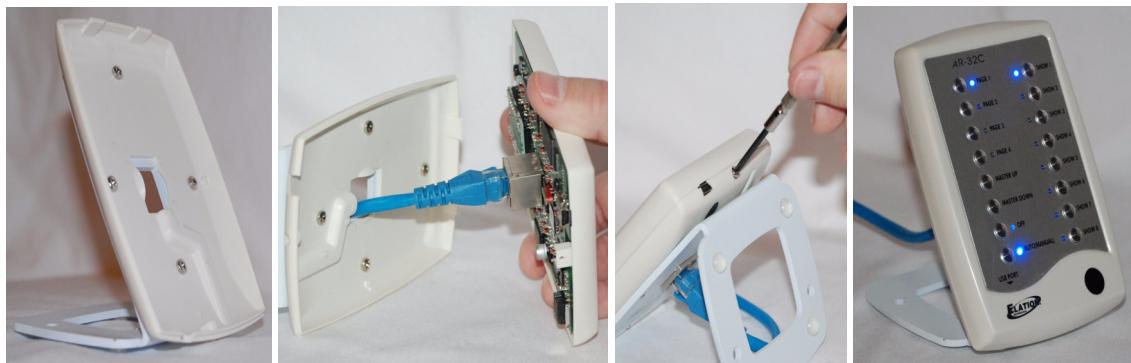


Figure 6

## 5.4 Setup Procedures

### 5.4.1 Software Installation

Install the AR-32 System Control Software as follows:

1. Insert the AR-32 System Control Software CD into a CD drive on PC.
2. Locate the AR-32 SetupRevX.XX.exe application (Figure 7) on the CD and double-click to begin installation.



Figure 7

3. Follow the prompts to complete install.

### 5.4.2 System Connection

To set up the AR-32 Architectural Recorder System for operation, connect the system components together as follows:

1. Connect the AR-32C Controller and AR-32P DMX Interface using Category 5 Ethernet LAN Cable.
2. Plug the AR-32P power cable into a 120VAC – 60Hz receptacle. Activate the [POWER] switch on the front of the AR-32P.
3. Connect DMX source (such as a console or other controller) to the DMX IN on the AR-32P.
4. Connect DMX fixtures to the DMX OUT on the AR-32P.
5. **Complete software installation before performing this step.** To configure the AR-32 system, connect the AR-32C to a PC using the USB link cable. Windows will prompt for driver installation.

### 5.4.3 Software Launch

Launch the AR-32 System Control Software as follows:

1. From the Windows desktop, select Start > Programs > Elation AR-32 > AR-32.

## 6. Operation

### 6.1 AR-32C Controls & Connections

The AR-32C Controller (Figure 8) has the following controls and connections. Each is described in Table 1.



**Figure 8**

**Table 1**

No.	Name	Description
1	[PAGE]	[PAGE] buttons (1-4) allow user to select from four pages (banks) of shows. Indicator (blue LED) shows selected page
2	[SHOW]	[SHOW] buttons (1-8) allow user to select individual scenes within a selected page. Indicator (blue LED) shows selected show.
3	[MASTER UP]	[MASTER UP] button offers intensity control by increasing all 512 DMX channel values from 0-255 or 0-100%.
4	[MASTER DOWN]	[MASTER DOWN] button offers intensity control by decreasing all 512 DMX channel values from 255-0 or 100-0%.
5	[OFF]	[OFF] button turns the system off. Indicator (blue LED) shows system is off.
6	[AUTO/MANUAL]	[AUTO/MANUAL] button toggles between Automatic and Manual operation modes when held for 2 seconds. Indicator shows Automatic (red LED) or Manual (blue LED) modes.
7	USB Port	USB port allows connection to a PC with AR-32 software.
8	IR Sensor	IR sensor receives signals from AR-32 IR remote.


The AR-32 is capable of holding up to 32 shows in memory, limited by a memory size of 128 Mb. Shows are configured using the AR-32 System Control Software. When operating the AR-32 in Manual mode, the 32 shows are mapped to the controllers [SHOW] buttons. Table 2 explains the show mappings used by the AR-32.

**Table 2**

Button	[SHOW1]	[SHOW2]	[SHOW3]	[SHOW4]	[SHOW5]	[SHOW6]	[SHOW7]	[SHOW8]
[PAGE1]	Show1	Show2	Show3	Show4	Show5	Show6	Show7	Show8
[PAGE2]	Show9	Show10	Show11	Show12	Show13	Show14	Show15	Show16
[PAGE3]	Show17	Show18	Show19	Show20	Show21	Show22	Show23	Show24
[PAGE4]	Show25	Show26	Show27	Show28	Show29	Show30	Show31	Show32

## 6.2 AR-32P Controls & Connections

The AR-32P DMX Interface (Figure 9) has the following controls and connections described in Table 3.

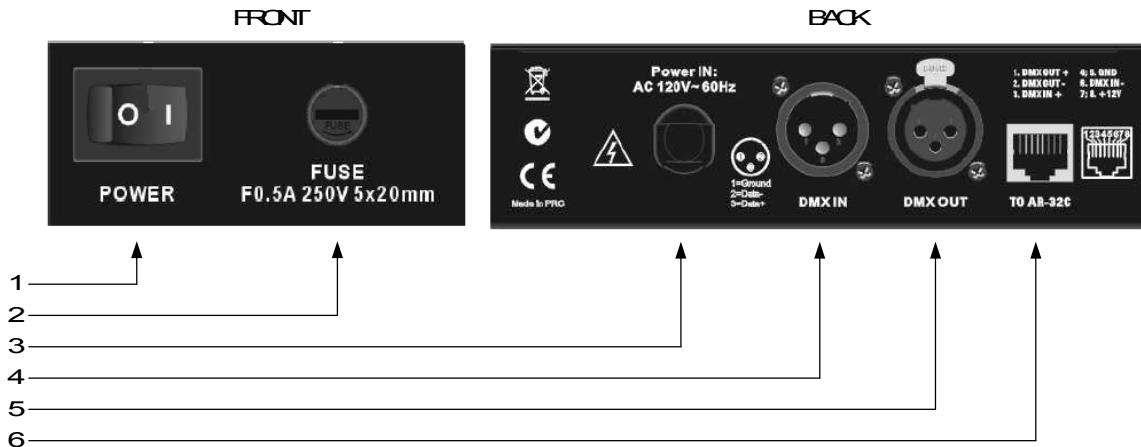

**Figure 9**

**Table 3**

No.	Name	Description
1	[POWER]	[POWER] switch turns the system on and off.
2	FUSE	FUSE connection allows user to replace the power supply fuse.
3	Power IN	Power IN cable provides AC power connection to the system.
4	DMX IN	DMX IN provides data connection from DMX sources via 3-pin XLR connector.
5	DMX OUT	DMX OUT provides data connection to DMX fixtures via 3-pin XLR connector.
6	TO AR-32C	TO AR-32C provides data connection to AR-32C controller via RJ-45 connector.

## 6.3 AR-32 IR Remote Controls

The AR-32 IR Remote (Figure 10) has the following controls and indicators. Each control is described in Table 4.



Figure 10

Table 4

No.	Name	Description
1	[OFF]	[OFF] button turns the system off when in Manual mode.
2	[Page]	[Page] buttons (1-4) allow user to select from four pages (banks) of shows when in Manual mode.
3	[Auto/manual]	[Auto/manual] button toggles between Automatic and Manual operation modes.
4	[Show]	[Show] buttons (1-8) allow user to select individual scenes within a selected page when in Manual mode.

## 6.4 DMX Channels

The AR-32 Architectural Recorder System has the ability to be controlled remotely using DMX512. The system uses 3 DMX channels, with starting address configurable in the AR-32 Control System Software. Table 5 describes the DMX channel mappings.

Table 5


DMX Channel	DMX Value	Function
1	0-3	Trigger SHOW 1
	4-7	Trigger SHOW 2
	8-11	Trigger SHOW 3
	12-15	Trigger SHOW 4
	16-19	Trigger SHOW 5
	20-23	Trigger SHOW 6
	24-27	Trigger SHOW 7
	28-31	Trigger SHOW 8
	32-35	Trigger SHOW 9
	36-39	Trigger SHOW 10
	40-43	Trigger SHOW 11
	44-47	Trigger SHOW 12
	48-51	Trigger SHOW 13
	52-55	Trigger SHOW 14
	56-59	Trigger SHOW 15
	60-63	Trigger SHOW 16
	64-67	Trigger SHOW 17
	68-71	Trigger SHOW 18
	72-75	Trigger SHOW 19
	76-79	Trigger SHOW 20
	80-83	Trigger SHOW 21
	84-87	Trigger SHOW 22
	88-91	Trigger SHOW 23
	92-95	Trigger SHOW 24
	96-99	Trigger SHOW 25
	100-103	Trigger SHOW 26
	104-107	Trigger SHOW 27
	108-111	Trigger SHOW 28
	112-115	Trigger SHOW 29
	116-119	Trigger SHOW 30
	120-123	Trigger SHOW 31
	124-127	Trigger SHOW 32
	128-255	Close active show
2	0-79	PAUSE active show
	80-160	PLAY active show
	161-255	STOP active show
3	0-127	Normal output
	128-255	BLACKOUT

## 6.5 Software Overview

The AR-32 Architectural Recorder System includes computer software that is used to configure and load shows to the controller itself. The software is designed for use on Microsoft Windows computer operating systems.

### 6.5.1 Main Screen

When the AR-32 Control System Software is launched, the Main Screen (Figure 11) is displayed.

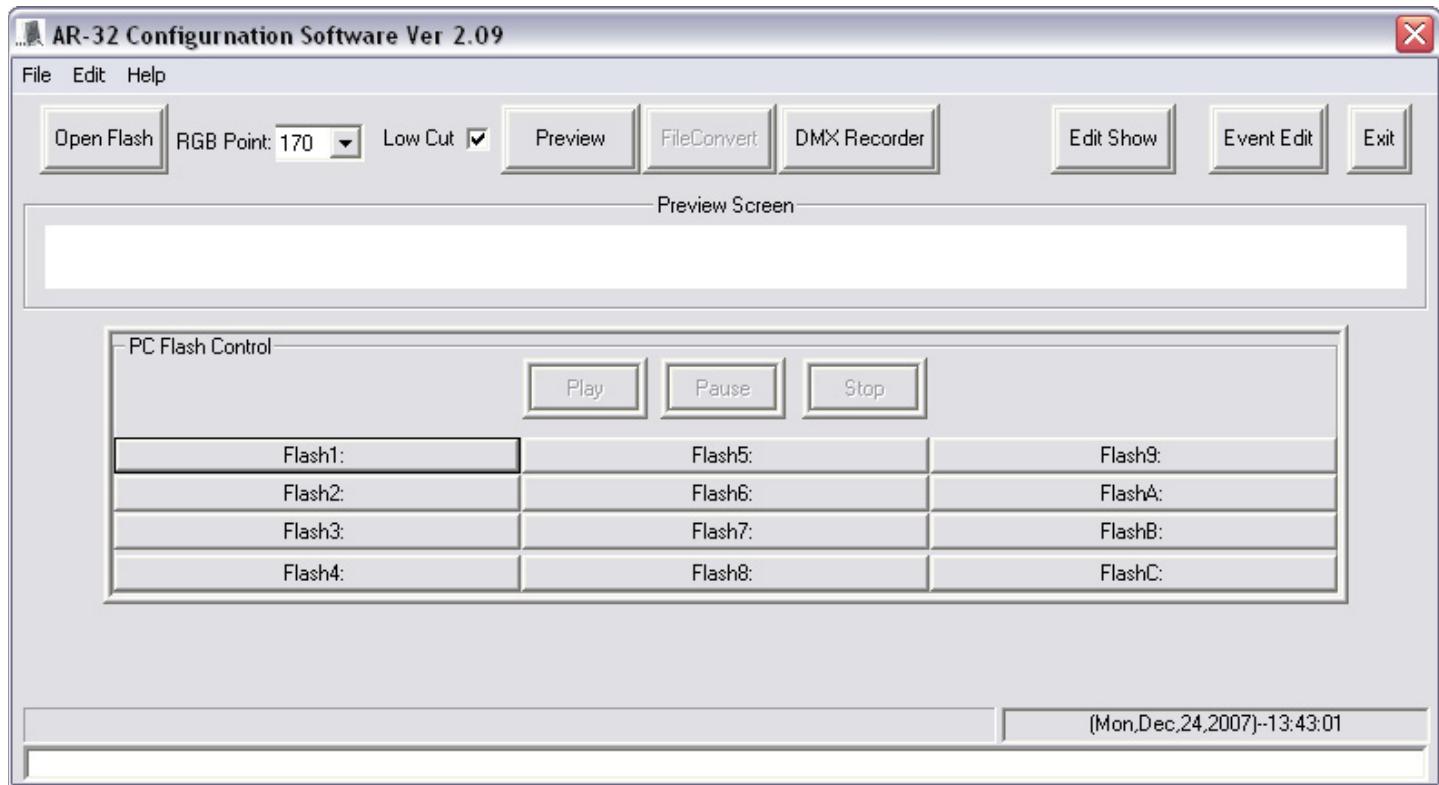

**Figure 11**

From the Main Screen, users may perform the following actions:

- Access File, Edit, and Help menus
- [Open Flash] files and assign each of the 12 [FlashX:] buttons
- Set RGB Point (1-170)
- Select Low Cut on/off
- [Preview] a selected Flash program
- [FileConvert] a selected Flash file to a .scn file
- Record [DMX Recorder] scenes to a .scn file
- Open [Edit Show] and [Event Edit] screens
- [Play], [Pause], and [Stop] selected Flash file

The Main Screen displays the current date and time in the lower right corner of the screen. These values are synchronized by the PC time and date settings.

## Managing Flash Files

Adobe Flash (.swf) files are popular animation graphics which can be used for playback on RGB fixtures. The AR-32 software is capable of controlling up to 170 pixels (each pixel using 3 DMX channels for Red, Green, Blue intensity (Figure 12). Pixel count is set using the drop menu labeled RGB Point. If the overall brightness of a Flash file appears dark in the preview window, use the Low Cut checkbox (on by default).

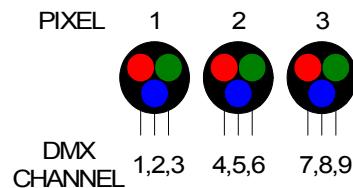


Figure 12

The pixels may be arranged in any orientation. This permits the production of simple animated graphic effects. For example, a 13x13 pixel square (169 pixels total) can be used to display a spinning color wheel. To accomplish this, the “stage” area in Flash must be set to 13x13 pixels (Figure 13).

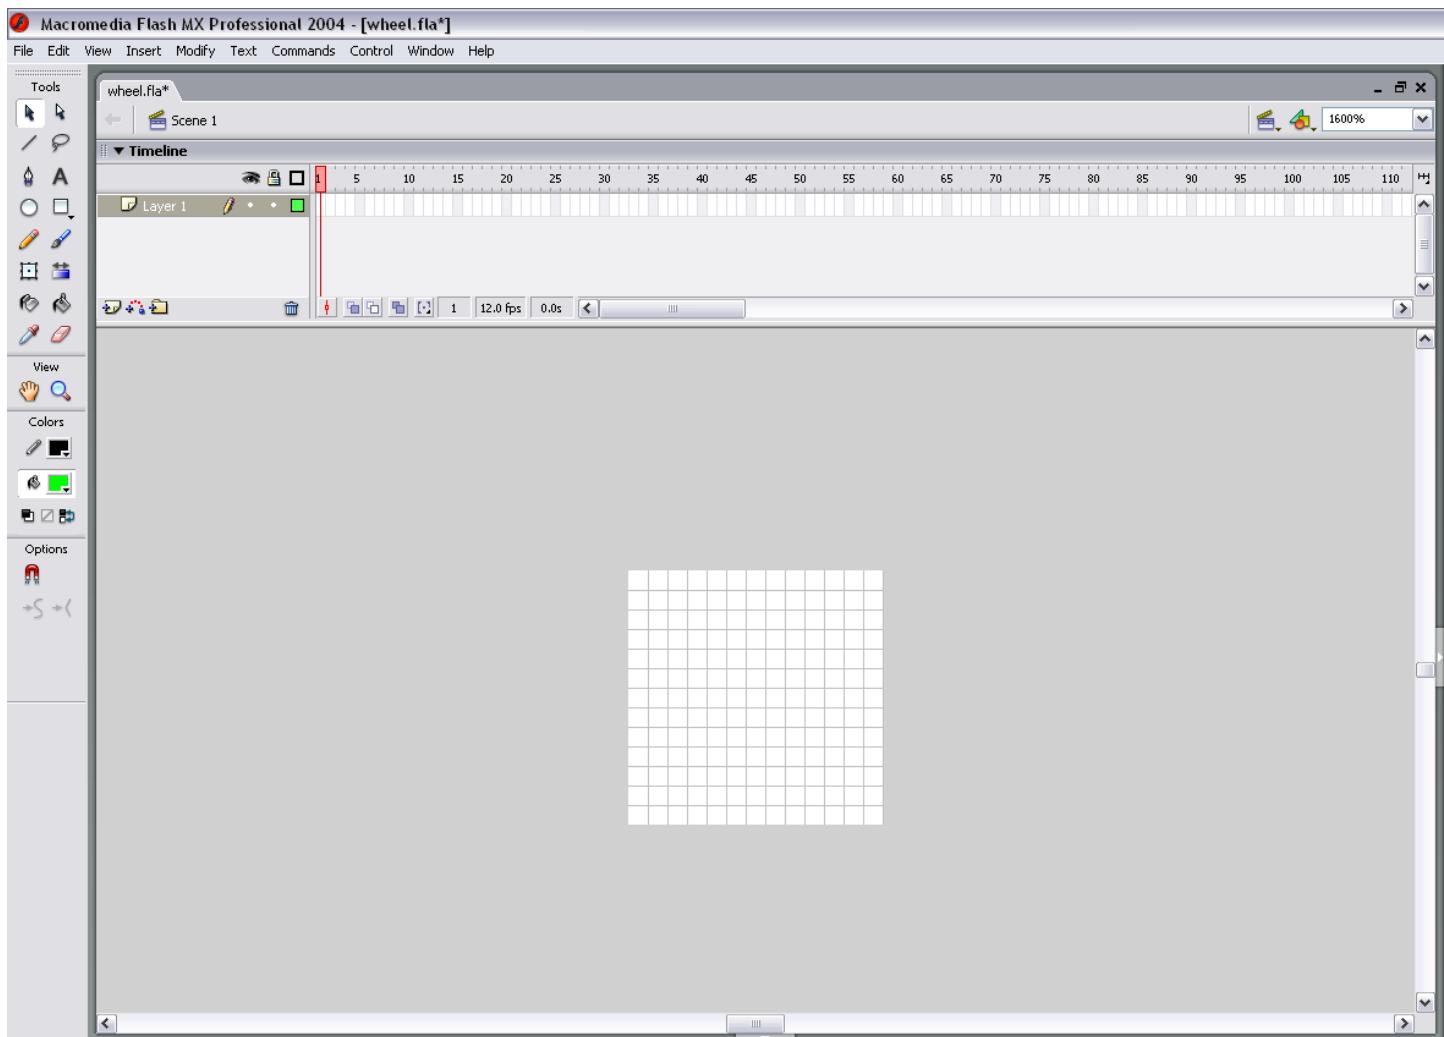


Figure 13

When working with Flash files, it is often useful to create a mask layer so that only the desired area is visible (Figure 14).

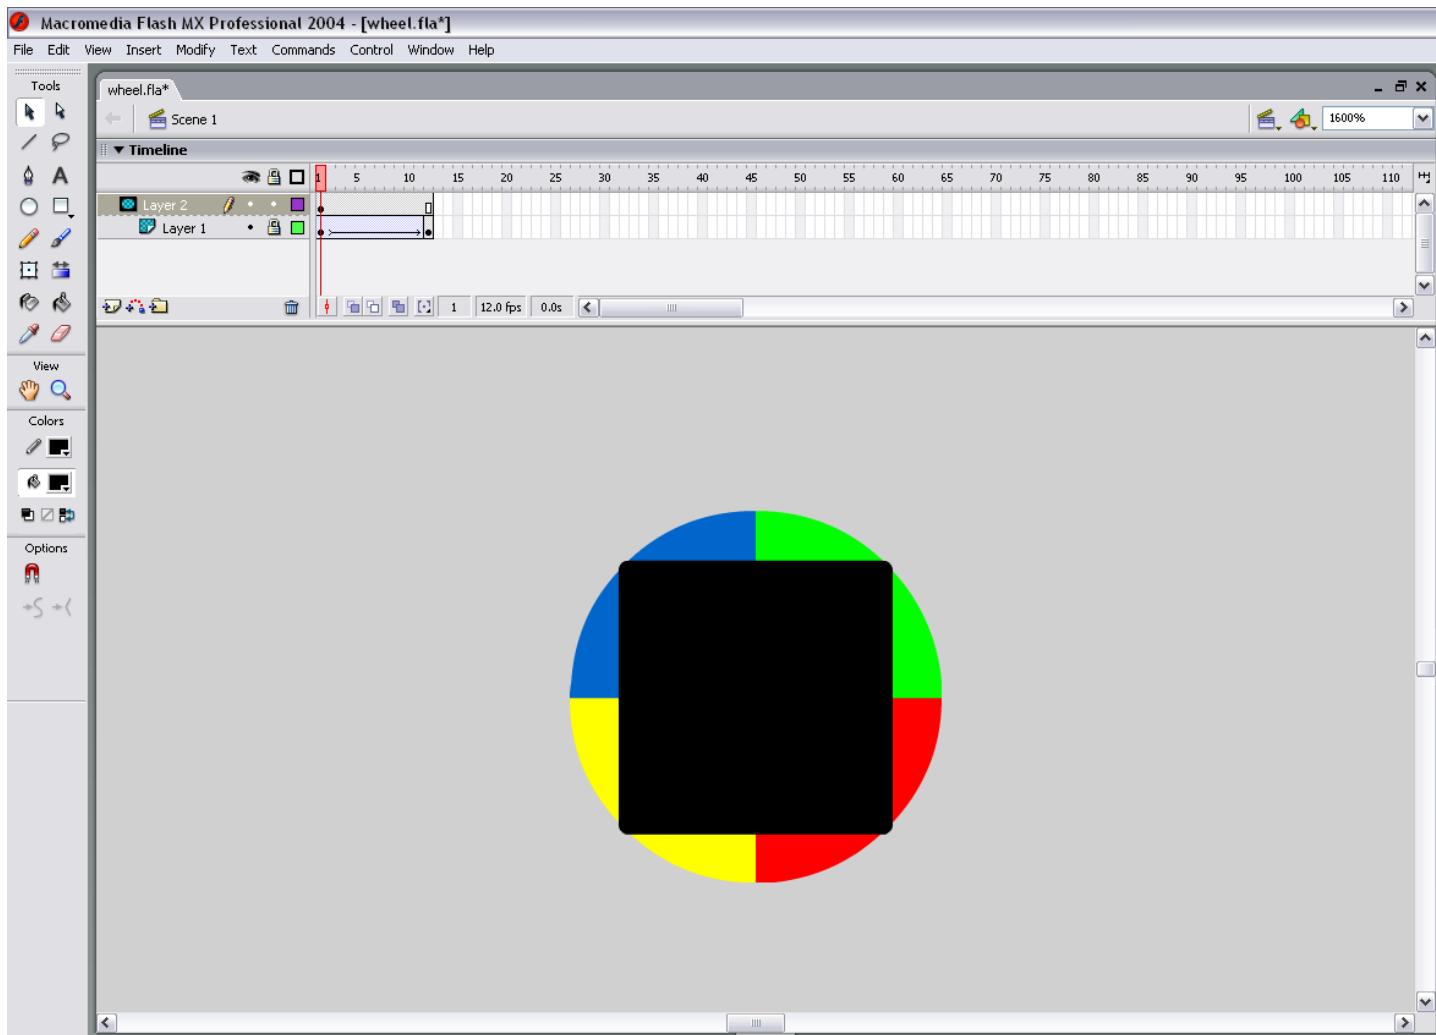


Figure 14

The mask object should be the same size as the stage area, in this case 13x13 pixels. Any animation occurring under the mask will only display in the masked area. In this example, a multi-colored wheel spins behind the mask, rotating 180 degrees in 12 frames. With frames per second set to 12, this animation will last exactly one second.

NOTE: The AR-32 software does not interpret action script, so only basic motion and shape tweening animations should be used.

The resulting animation will be a 13x13 pixel square with four colors rotating 180 degrees when played back (Figure 15).

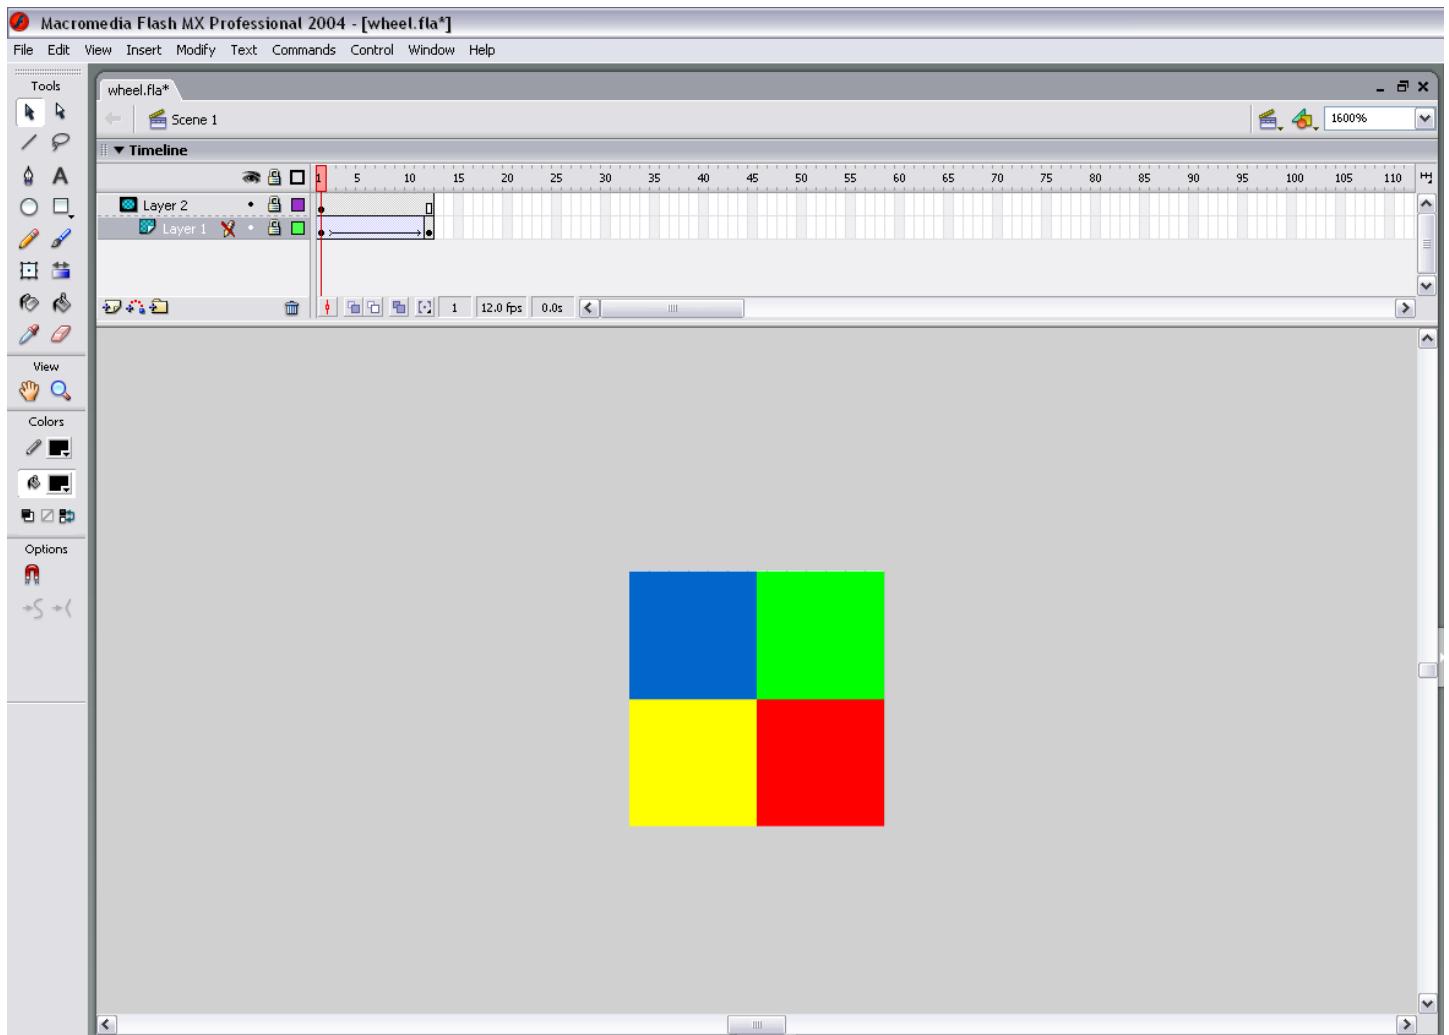



Figure 15

When played back on RGB fixtures, each pixel in the array will receive its DMX color values from the AR-32 controller, and should look similar to the original Flash file including any animation (Figure 16).



Figure 16

The twelve [FlashX:] buttons on the Main Screen may be configured to link to Flash files for quick recall. To link a file, select (right click) the desired [FlashX:] button. A window will open allowing you to browse to the desired .swf file. Highlight the file and select open file. The file is now linked to the button, and the button will display the linked file name (Figure 17).

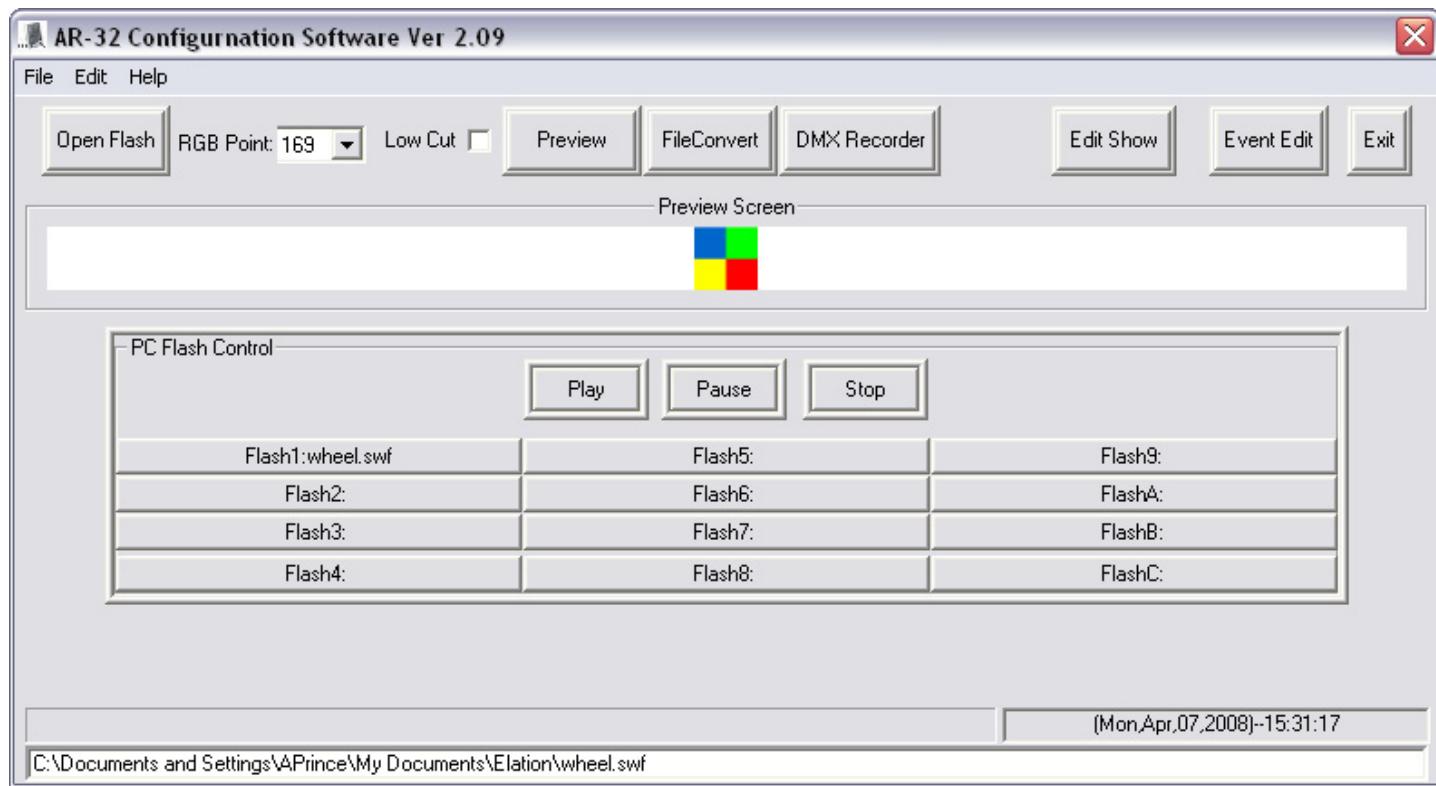

**Figure 17**

Files may also be opened using the [Open Flash] button. The [Play], [Pause], and [Stop] buttons allow manual control of the playback.

Flash files may be converted to DMX scene files (.scn) and loaded to the AR-32. With the desired file loaded in Preview Screen, select [File Convert]. Enter Flash file playback speed in frames per second (Figure 18).

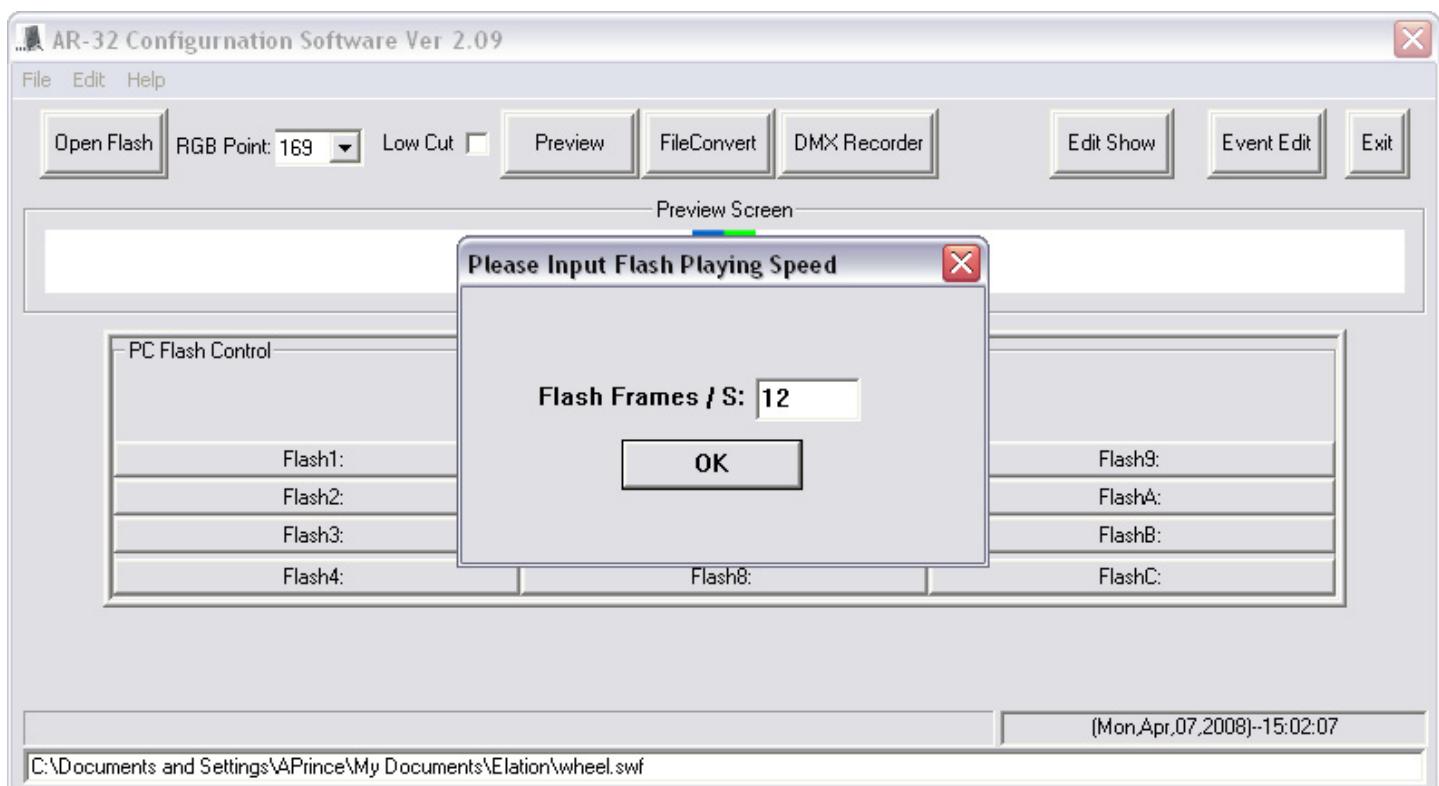


Figure 18

Select [OK]. Set desired save file name (.scn) and location. A progress bar shows conversion progress (Figure 19).

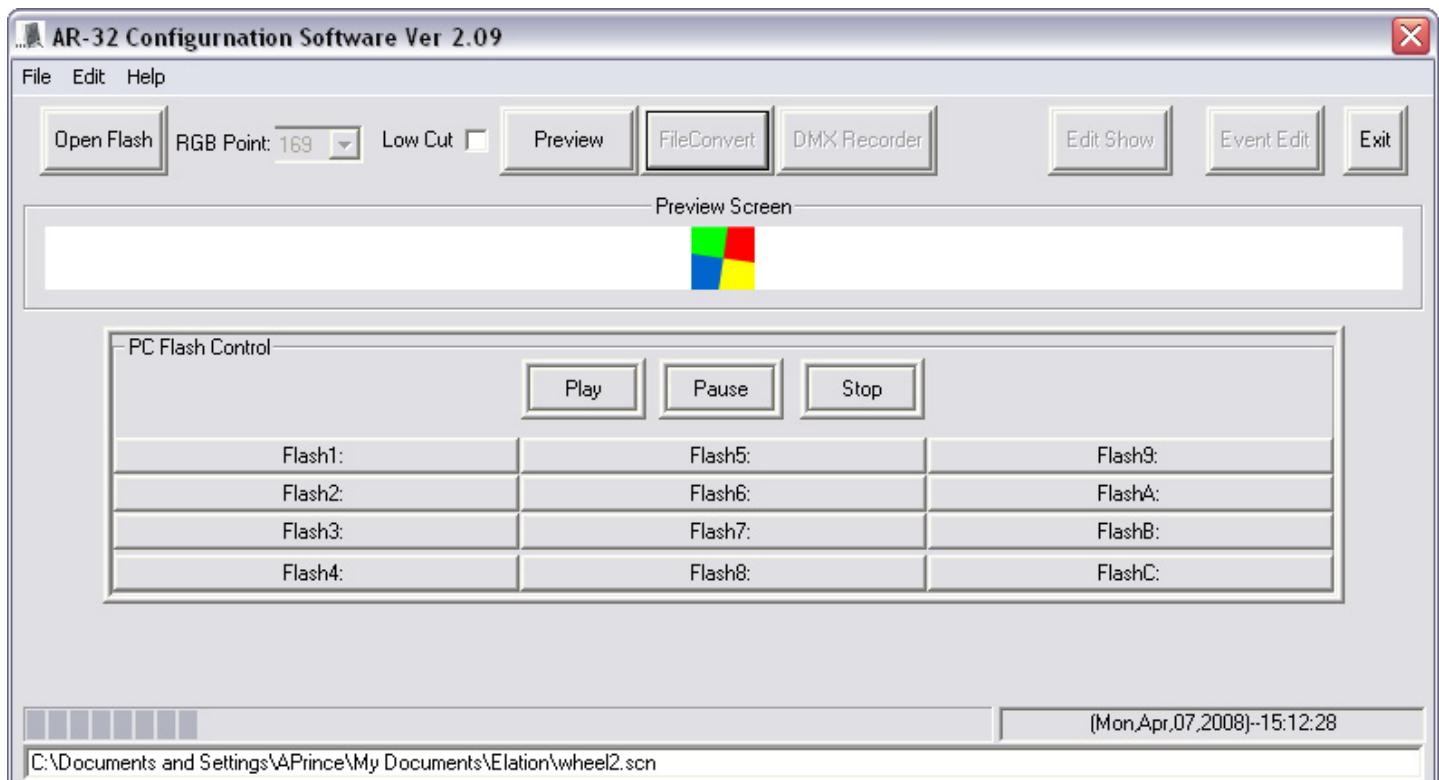


Figure 19

## Recording DMX Files

The AR-32 Architectural Recorder System is designed to record DMX data streams from another controller. These recordings are then saved as DMX scene (.scn) files for playback. To record a DMX scene file, prepare the source controller and connect its DMX output to the AR-32P DMX Input.

Select [DMX Recorder] and set desired save file name (.scn) and location. [Record], [Stop Recorder], and record timer appear on the lower center of the screen (Figure 20).

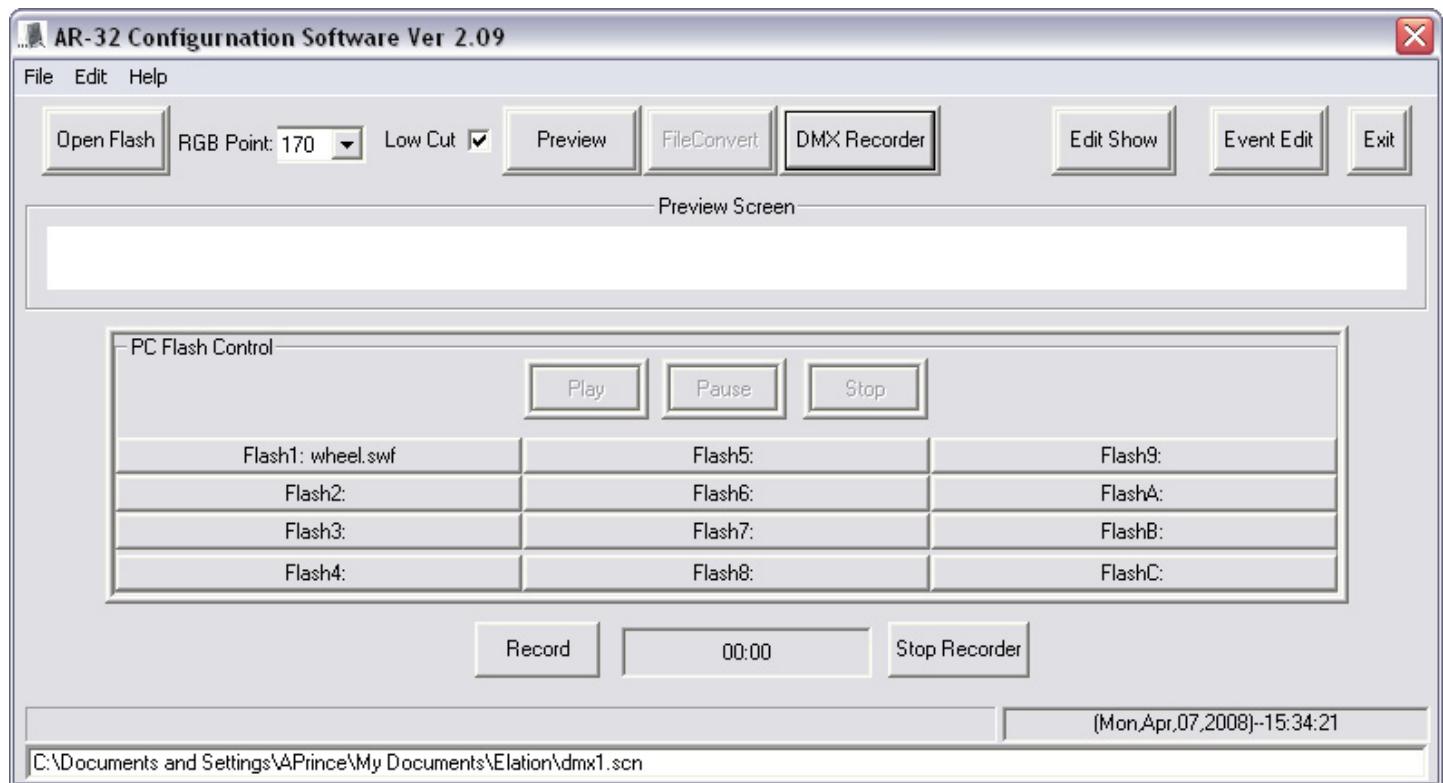


Figure 20

Simultaneously trigger the desired scene on the source controller and select [Record] on the screen. The record timer will increment as the scene records. When finished, select [Stop Recorder].

## 6.5.2 Show Edit Screen

The Show Edit Screen (Figure 21) allows users to configure each of the 32 shows and handles file transfers between the AR-32C and the PC.

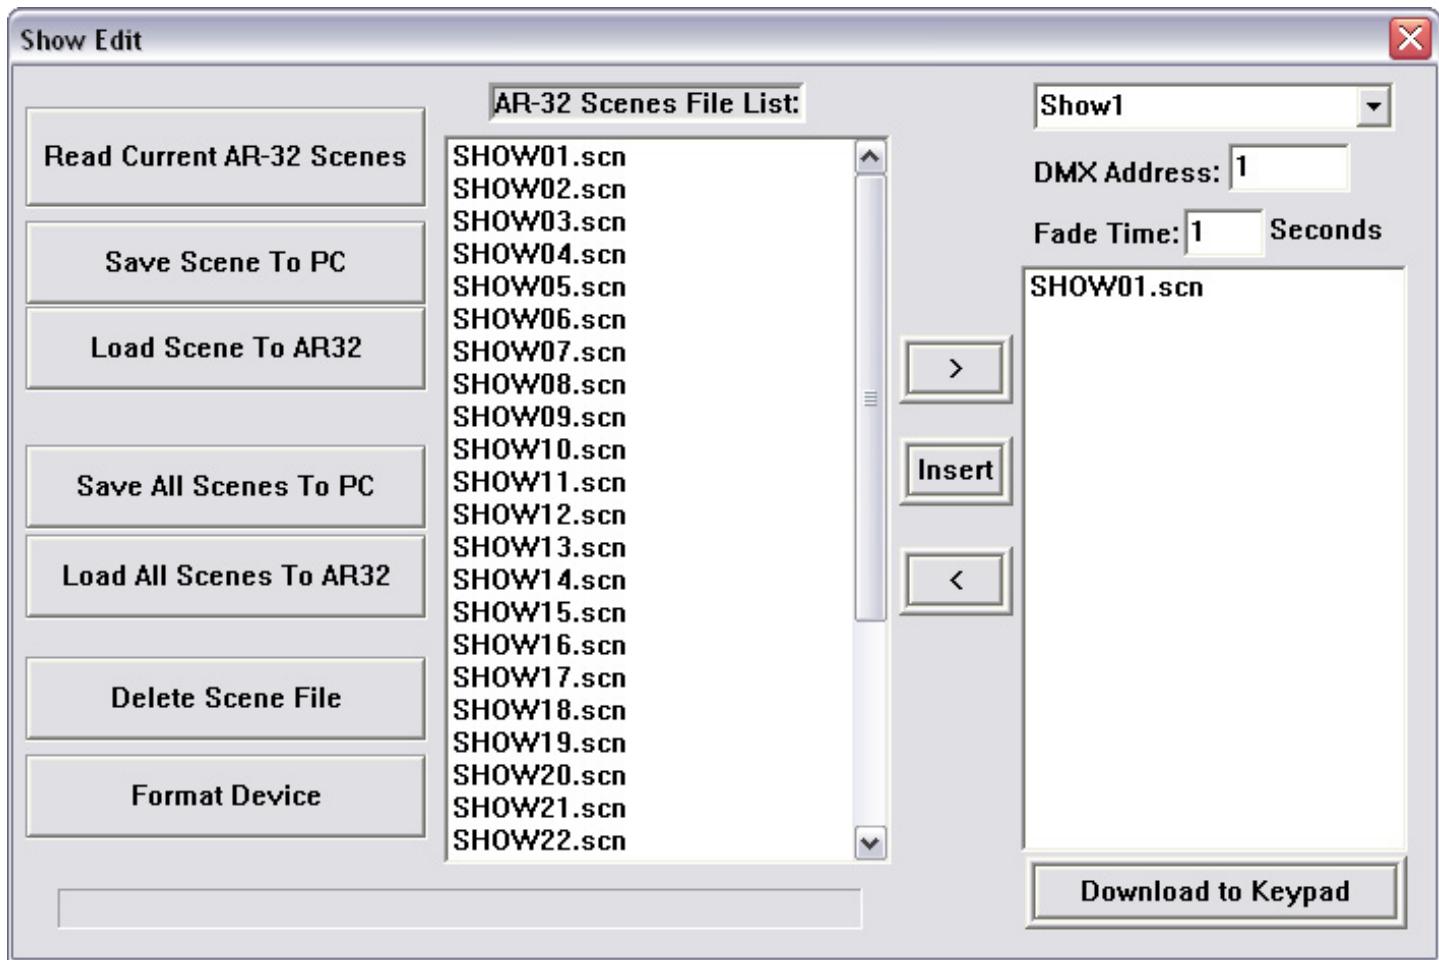


Figure 21

From the Show Edit Screen, users may perform the following actions:

- [Read Current AR-32 Scenes] (that are loaded in AR-32 controller memory)
- [Save Scene To PC]
- [Load Scene To AR-32]
- [Save All Scenes To PC]
- [Load All Scenes To AR-32]
- [Delete Scene File]
- [Format Device] (erase all AR-32 memory)
- Assign scene file to show memory location
- Assign AR-32 DMX address
- Assign scene fade time in seconds
- [Download To Keypad] (save individual show settings to AR-32 controller)

## Managing DMX Files

To load current AR-32C scene files from the controller into the software, select [Read Current AR-32 Scenes]. Scenes display in the AR-32 Scenes File List window. Scenes display in alphabetical order, and DO NOT retain any show mappings or sequencing.

Any scene file may be saved to PC for storage or backup. To save, highlight the desired scene and select [Save Scene To PC]. Likewise, any scene file may be loaded from PC into the AR-32 software. To load a scene file, select [Load Scene To AR-32].

To save all scene files currently displayed in the AR-32 Scenes File List to PC, select [Save All Scenes To PC]. The software will prompt you to enter a save location folder name (Figure 22).

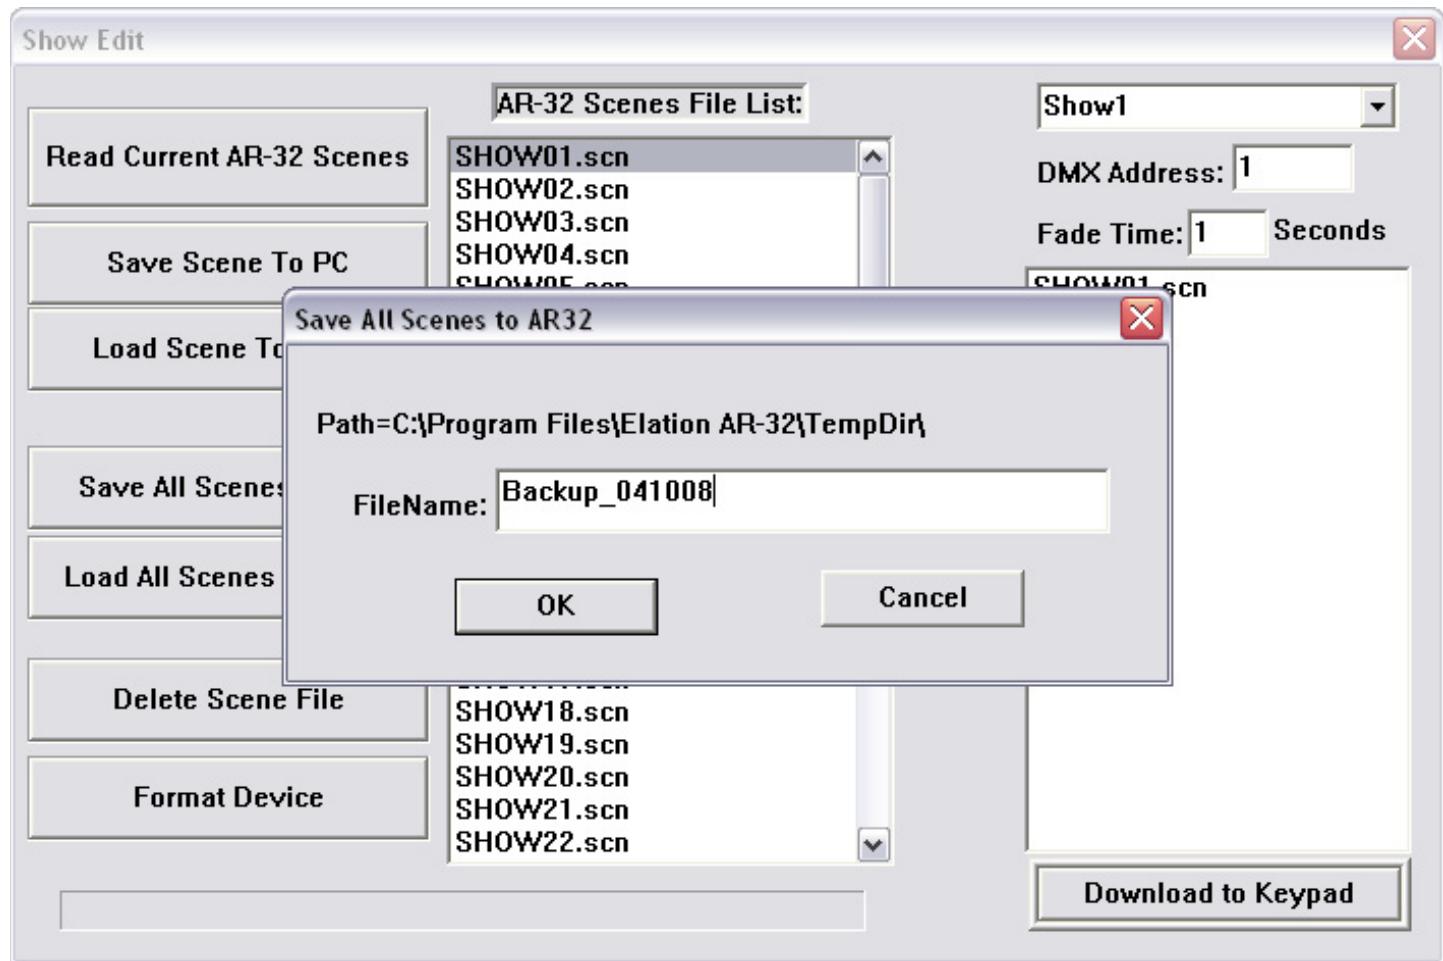


Figure 22

Save folders are located in the **C:\Program Files\Elation AR-32\TempDir** by default.

To load all scenes from a PC folder to the AR-32 software, select [Load All Scenes To AR-32]. The software will prompt you to select a save location folder from which to load (Figure 23). Up to 248 scene files may be loaded at one time.

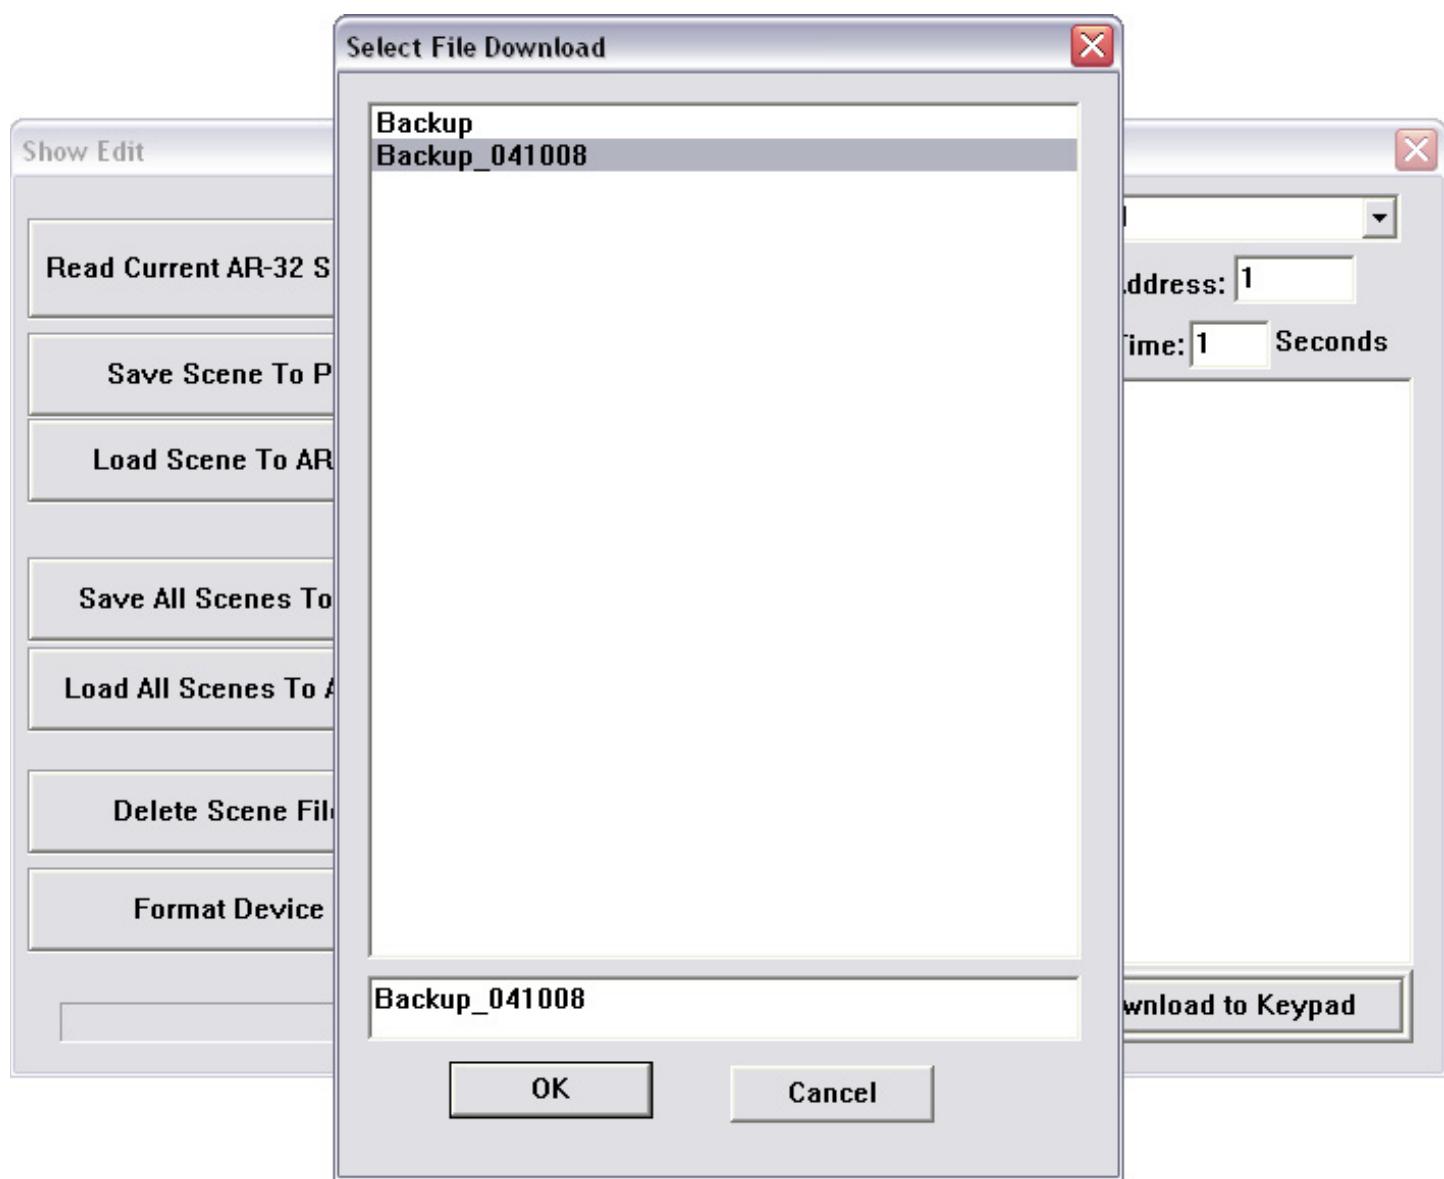


Figure 23

To delete a file from the AR-32 Scenes File List, highlight the desired file and select [Delete Scene File]. The scene file is removed from the list. Take care to save files to your PC (if desired) before deleting them from the AR-32 Scenes File List as this action cannot be undone.

To erase all AR-32 scenes from controller memory, select [Format Device]. The software will prompt you with a warning to confirm this action (Figure 24).

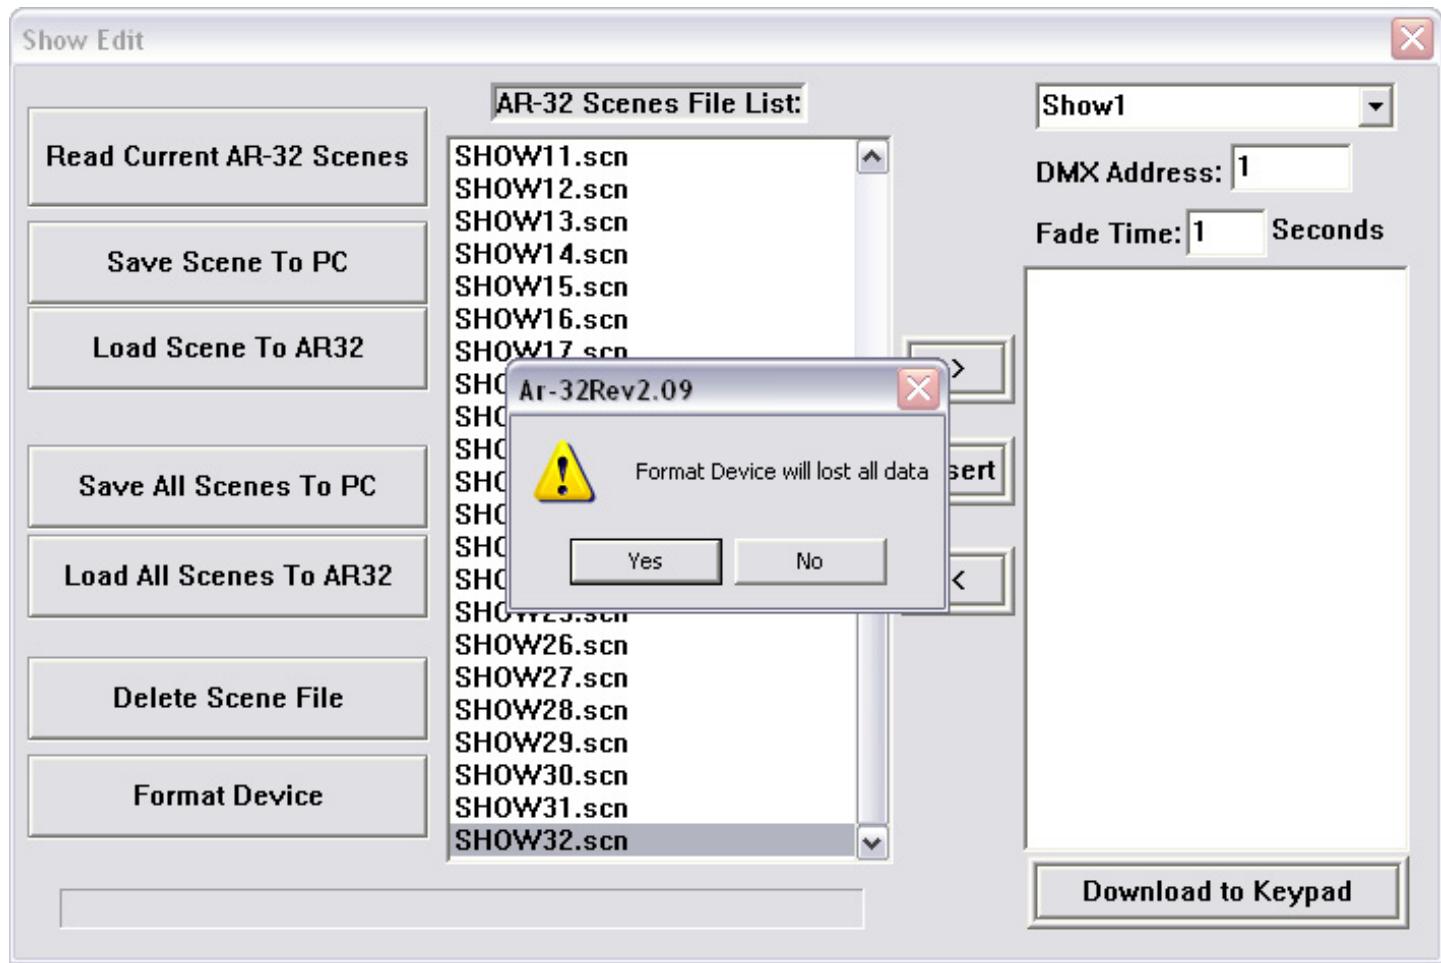


Figure 24

## Configuring Shows

Up to 16 scene files may be assigned to each of the 32 show locations (maximum of 248 scene files or 128 Mb). Select the show to configure using the drop menu in the top right corner of the screen (Figure 25). Set the base address of the AR-32 in the DMX Address field. This allows a DMX device to trigger the AR-32 remotely. Set the fade time (between scenes) in the Fade Time field. This value determines how many seconds it takes to change from scene to scene.

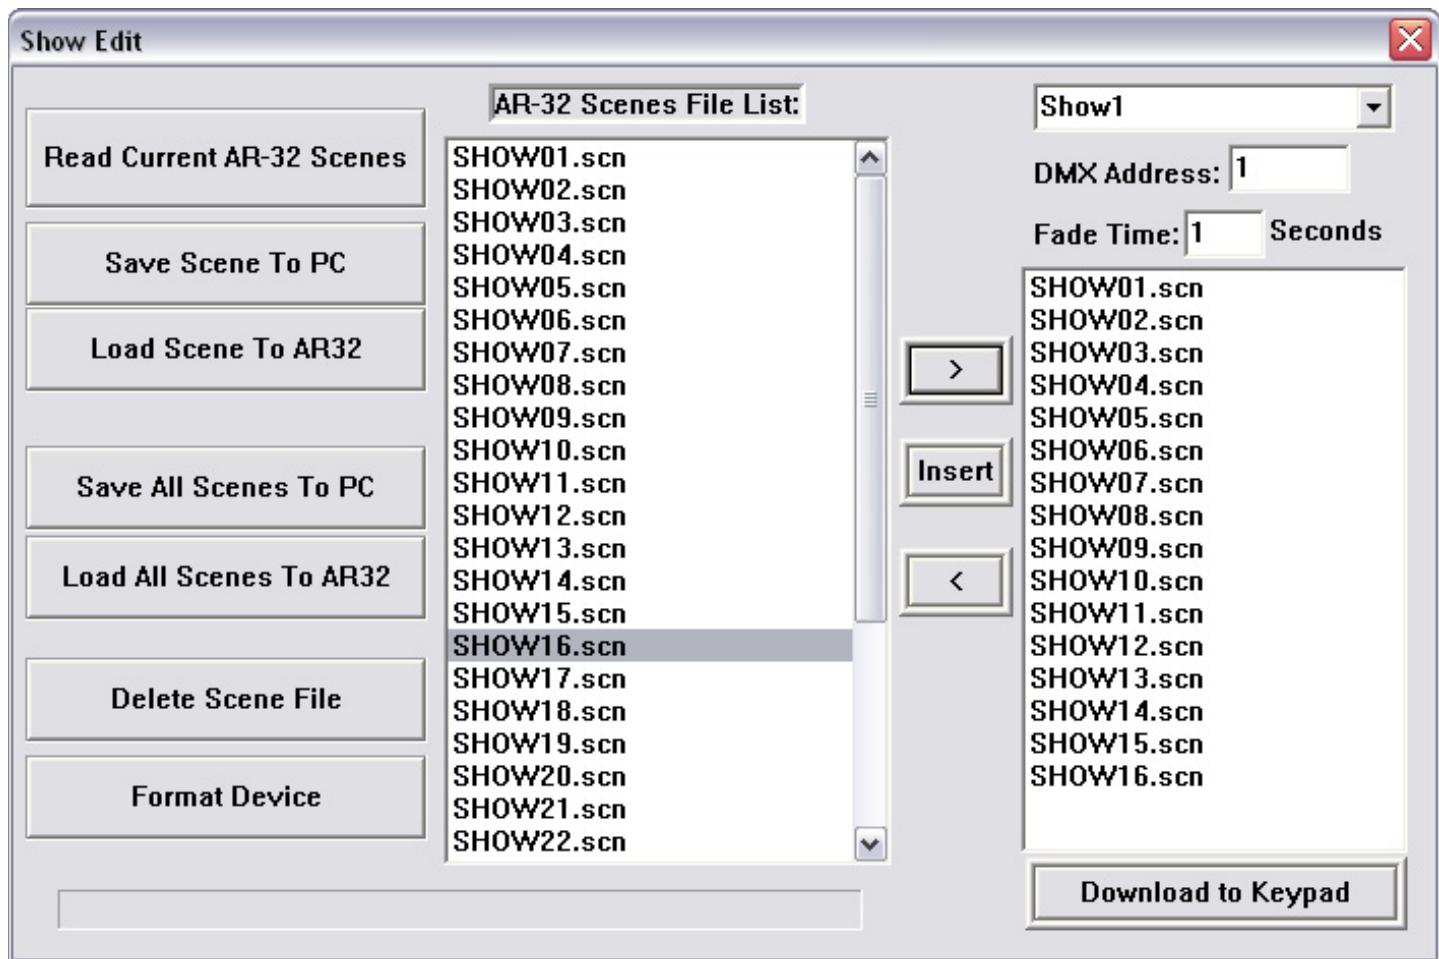


Figure 25

Assign scenes to the selected show using the [>], [Insert], and [<] buttons. Highlight a scene in the AR-32 Scenes File List and select [>] to add it to the show list on the right. Likewise, highlight a scene in the show list and select [<] to remove it from the show. To insert a scene, highlight it in the AR-32 Scenes File List, then highlight the scene it should precede in the show list, and select [Insert].

To save a configured show to the AR-32C controller, select [Download to Keypad].

### 6.5.3 Events Edit Screen

The Events Edit Screen (Figure 26) allows users to set timed triggers for each of the 32 show files and download them to the AR-32.

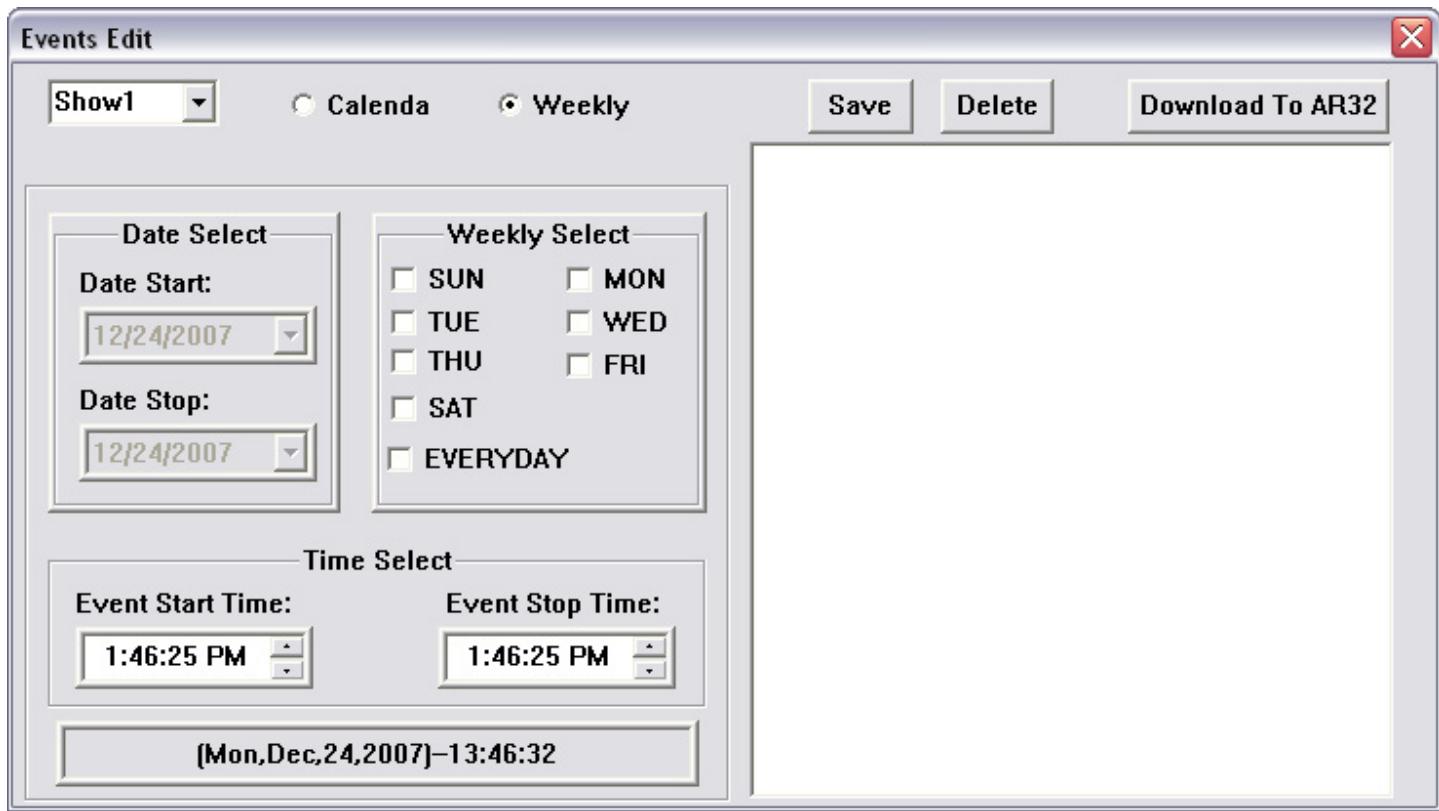


Figure 26

From the Events Edit Screen, users may perform the following actions:

- Select show to assign timed events
- Select Calendar or Weekly events
- [Save] current settings
- [Delete] settings
- [Download To AR-32] (save timed events to AR-32)

The Events Edit Screen displays the current date and time in the lower left corner of the screen. These values are synchronized by the PC time and date settings.

To select a show for timed event assignment, use the drop menu in the top left corner of the screen. Next, choose whether the event will occur based on calendar date or day of week by selecting the appropriate radio button. The screen will enable the Date Select or Weekly Select areas accordingly.

## Weekly Events

Assign Weekly Events to a selected show as follows:

1. Select the days (or everyday) for the show to play from the Weekly Events area (Figure 27).

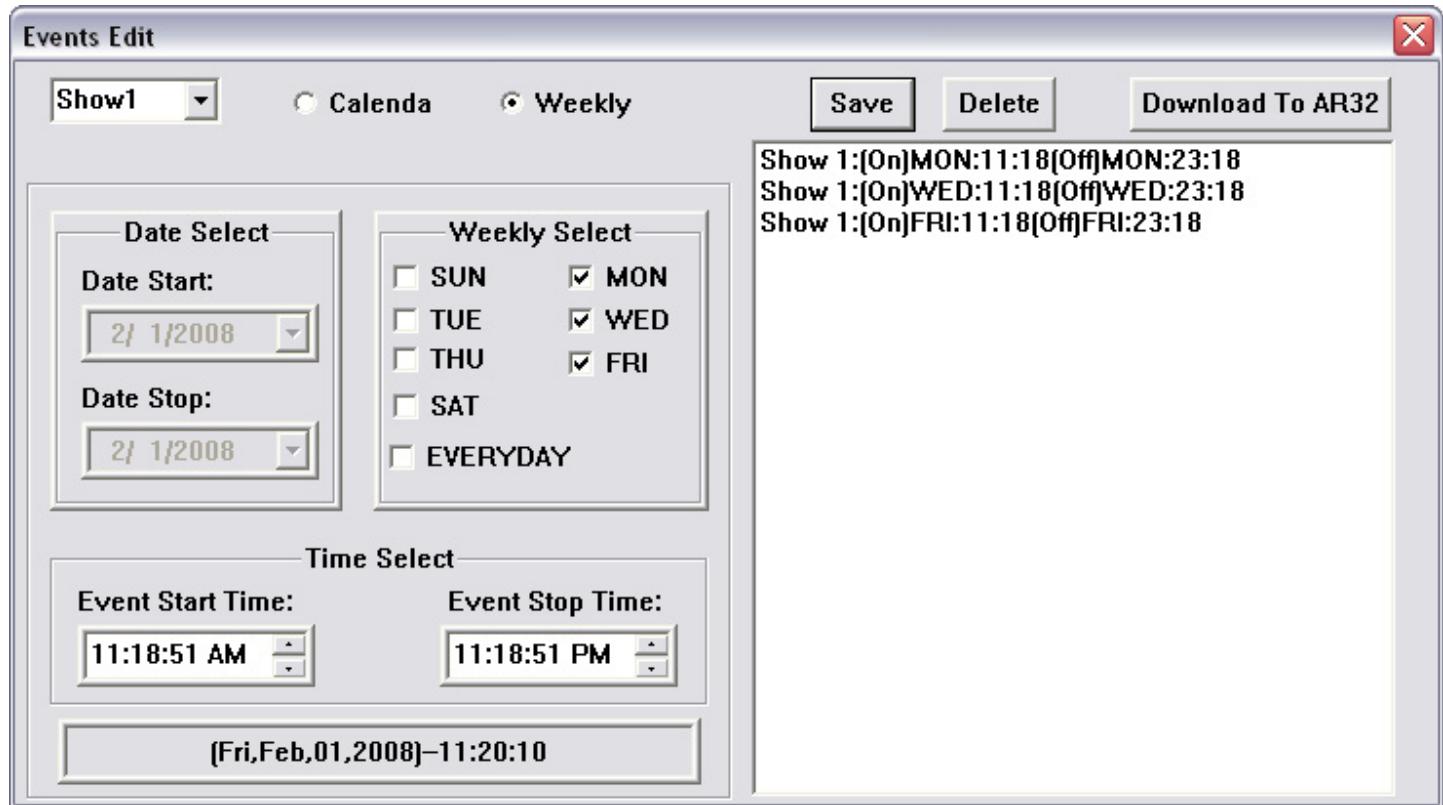


Figure 27

2. Set Event Start and Stop Time in the Time Select area.
3. Select the [Save] button. Saved events will display in the window on the right side of the screen.
4. If a saved event is incorrect, it may be removed by highlighting the event and selecting the [Delete] button.
5. Select the [Download To AR-32] button to download events to the controller.

## Calendar Events

Assign calendar events to a selected show as follows:

1. Select a Date Start and Date Stop from the Date Select area (Figure 28).

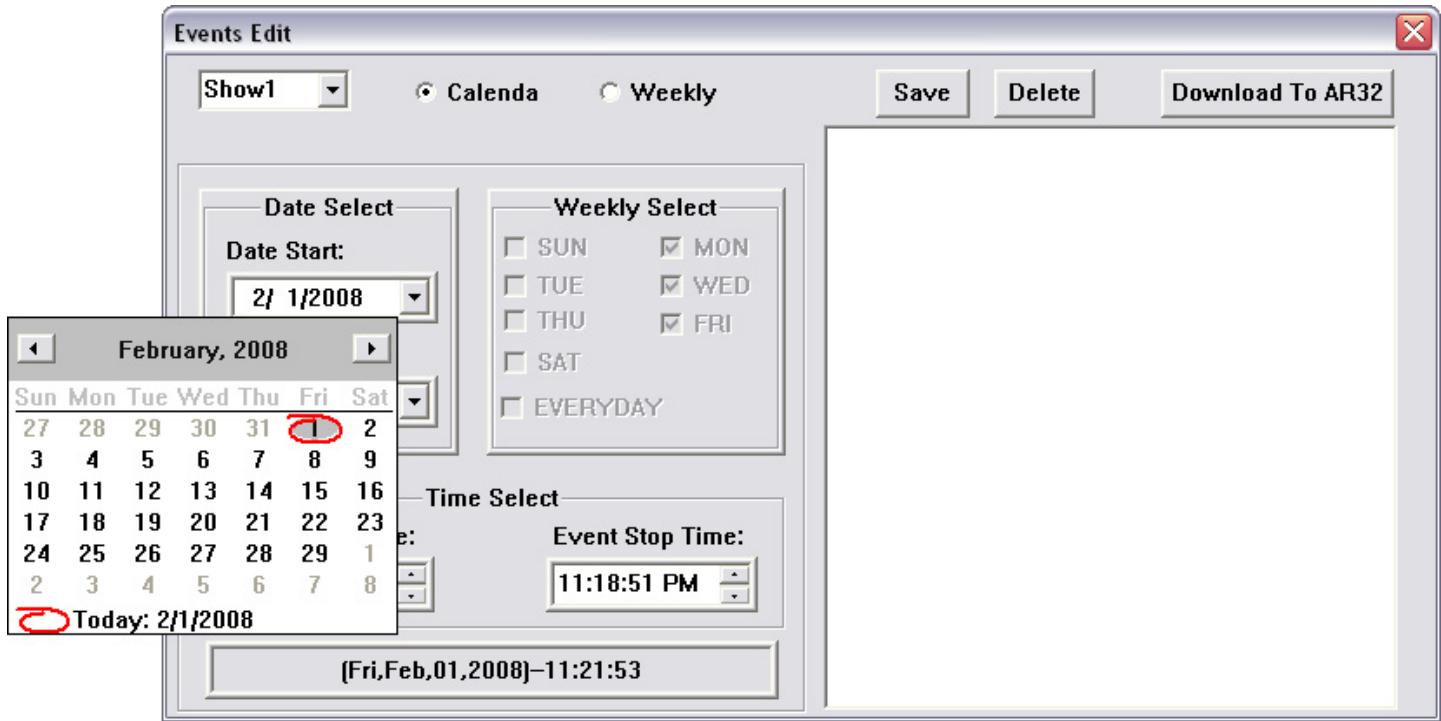


Figure 28

2. Set Event Start and Stop Time in the Time Select area.
3. Select the [Save] button. Saved events will display in the window on the right side of the screen (Figure 29).

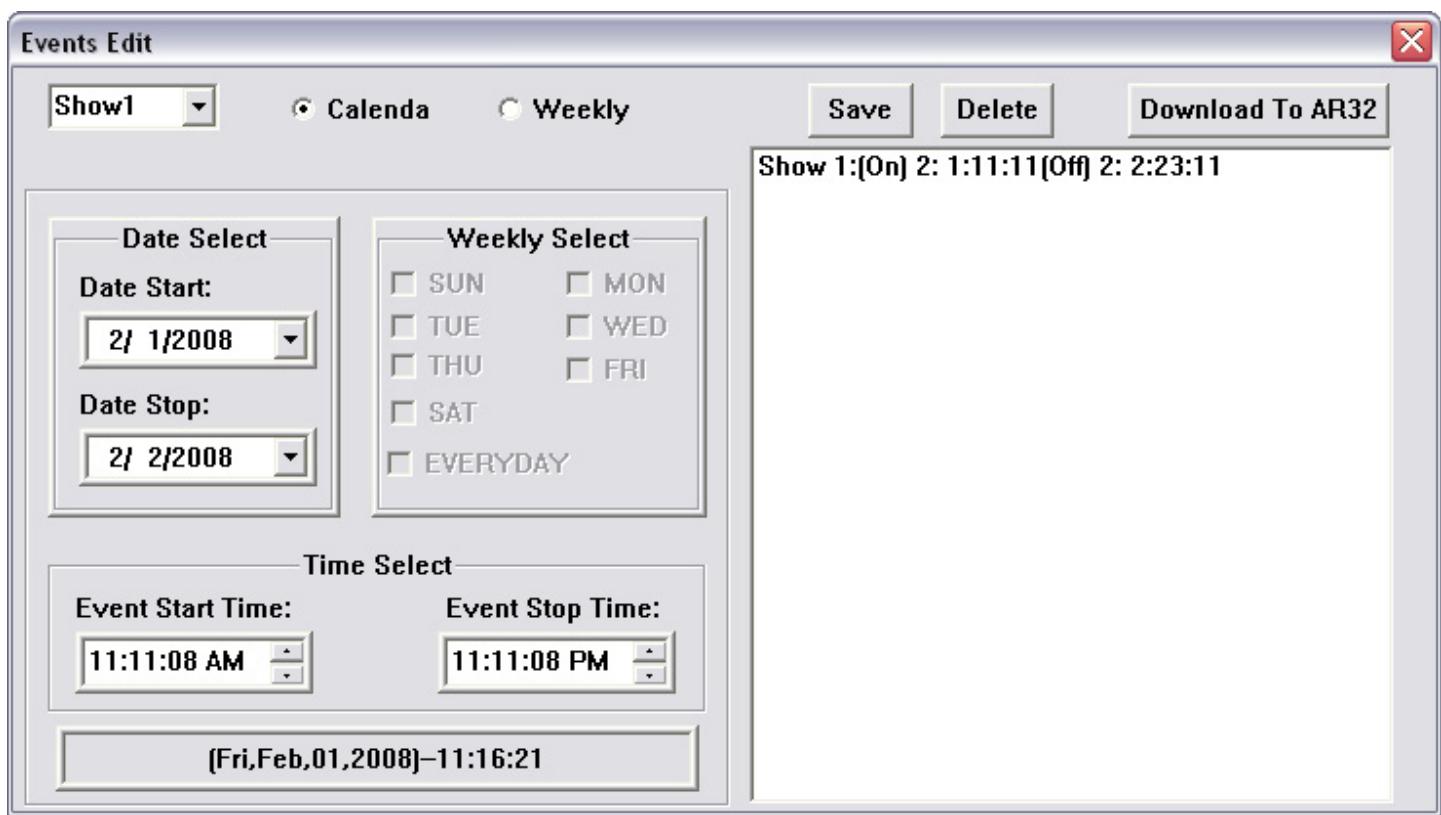


Figure 29

4. If a saved event is incorrect, it may be removed by highlighting the event and selecting the [Delete] button.
5. Select the [Download To AR-32] button to download events to the controller.

## 6.6 Programming Tips

### Flash Files:

- Only Flash (.swf) files without action script will convert.
- Flash file speed should never exceed 35 frames per second.
- Flash file size should never exceed 170 pixels with 255,000 total frames.
- File playback automatically loops. Ensure animation has common start/stop point or fades in/out.

### DMX Files:

- DMX scene files are limited to 128 Mb total space in the AR-32 controller. Longer recordings occupy more memory.
- Recording one full cycle of motion or color effect will ensure smooth playback when looped.
- File playback automatically loops. Ensure chases have common start/stop point.

## 7. Service

### 7.1 Maintenance

The AR-32 Architectural Recorder System should require minimal maintenance over its operational life.



To prevent the risk of electrical shock, do not open this unit. There are no user serviceable parts inside this unit.

The following basic maintenance practices will help keep the system performing well and looking good:

#### 7.1.1 General Inspection

1. Inspect the system components on a regular basis. Check each button and indicator for proper operation. Ensure data cables are securely connected. Check for dirt or moisture on all system surfaces.
2. Correct any external problems and test the system. If there are still indications that something is not functioning correctly, contact Elation Customer Support.

#### 7.1.2 Basic Cleaning

1. Wipe the external surfaces of system components on a regular basis using a dry cloth to prevent dust accumulation. If necessary, slightly moisten the cloth with a mild soap and water solution.



Never use an abrasive cleaning solution on the exterior surfaces of the system components.

## 7.2 Troubleshooting

The AR-32 Architectural Recorder System should perform well when properly operated and maintained, however, sometimes things just don't work like they should. Table 6 contains symptoms, causes, and resolutions for common faults.

**Table 6**

Symptom	Cause	Resolution
No Power	Bad power connection.	Check power connection. Reconnect plug if needed.
	No receptacle power.	Ensure receptacle has power.
	Bad fuse.	Check fuse. Replace if needed.
Erratic Fixture Behavior	Improper DMX addressing.	Check and correct DMX addressing.
	Improper DMX data cable.	Verify proper DMX data cable. Replace if needed.
	No DMX termination.	Properly terminate DMX data run.
No Control	Bad data connection.	Check all data cable connections. Repair or reconnect as needed.
	No power.	See No Power above.
	Bad remote batteries.	Replace remote batteries.
	Improper DMX addressing.	Check and correct DMX addressing.



Elation Professional ®  
A Division of the American DJ Group of Companies  
6122 S. Eastern Avenue Los Angeles, CA 90040 USA  
Tel: 866-245-6726 Fax: 323-832-9142  
Web: [www.elationlighting.com](http://www.elationlighting.com)  
E-mail: [info@elationlighting.com](mailto:info@elationlighting.com)